



CallPilot Reference Guide

BCM50 3.0

CallPilot

Document Status: **Standard**

Document Number: **NN40090-100**

Document Version: **02.01**

Date: **August 2007**

Copyright © 2005–2007 Nortel Networks, All Rights Reserved

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Trademarks

Nortel, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

Microsoft, MS, MS-DOS, Windows, and Windows NT are trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

Task List

| | |
|--|-----------|
| Getting started | 9 |
| Using CallPilot | 13 |
| Setting up your mailbox | 21 |
| To initialize your mailbox | 22 |
| To check which mailbox interface you use | 23 |
| To open an initialized mailbox - Norstar Voice Mail | 24 |
| To open an initialized mailbox - CallPilot | 24 |
| To open your mailbox using Auto-Login | 24 |
| To open your mailbox remotely | 25 |
| To change your password | 26 |
| To record your name in the Company Directory | 27 |
| To assign a personal Target Attendant | 28 |
| Feature codes and mailbox options | 31 |
| Greetings | 37 |
| To record a Primary or Alternate mailbox greeting | 40 |
| To choose a Primary or Alternate mailbox greeting | 42 |
| To record a Personalized mailbox greeting | 43 |
| To delete a Personalized mailbox greeting | 45 |
| Accessing your messages | 47 |
| To play your messages - Norstar Voice Mail | 48 |
| To play your messages - CallPilot | 50 |
| To retrieve an erased message - Norstar Voice Mail | 52 |
| To retrieve an erased message - CallPilot | 52 |
| To use Call Screening | 53 |
| To interrupt a caller | 53 |
| Sending messages | 55 |
| To record and send a message using the Open Mailbox feature - Norstar Voice Mail | 56 |
| To record and send a message using the Open Mailbox feature - CallPilot | 57 |
| To record and send a message using the Leave Message feature - Norstar Voice Mail | 58 |
| To record and send a message using the Leave Message feature - CallPilot | 58 |
| To search the Company Directory | 60 |
| To assign message delivery options - Norstar Voice Mail | 62 |
| To assign message delivery options - CallPilot | 64 |
| To reply to an internal caller - Norstar Voice Mail | 67 |
| To reply to an internal caller - CallPilot | 67 |
| To reply to an external caller - Norstar Voice Mail | 68 |
| To reply to an external caller - CallPilot | 68 |
| To place a Thru-Dial call | 69 |
| To search the Company Directory while placing a Thru-Dial call | 70 |
| To use Thru-Dial to reach your Target Attendant | 70 |

| | |
|--|------------|
| Call Forwarding your calls | 71 |
| To set up Call Forward remotely | 71 |
| To turn Call Forward with CLID on or off | 73 |
| Transferring calls | 75 |
| To transfer a call to a mailbox from your telephone | 75 |
| To transfer a mailbox owner's call to their mailbox..... | 76 |
| To transfer a call to a CCR Tree..... | 76 |
| To set up Outbound Transfer to a phone number | 79 |
| To set up Outbound Transfer to an extension | 80 |
| To turn Outbound Transfer on or off..... | 81 |
| Off-premise Message Notification | 83 |
| To set up Off-premise Message Notification to a phone number | 84 |
| To set up Off-premise Message Notification to an extension | 87 |
| To set up Off-premise Message Notification to a pager | 89 |
| To set up Off-premise Message Notification to more than one destination..... | 91 |
| To change the time range or type of message parameters..... | 93 |
| To change the destination from phone to another destination | 95 |
| To change the destination from pager to phone or extension | 97 |
| To change the destination from phone or extension to pager | 98 |
| To delete a destination number | 100 |
| To add a destination number..... | 102 |
| To turn Off-premise Message Notification on or off..... | 103 |
| Recording a call | 105 |
| To record a call..... | 106 |
| Broadcast and Information messages | 107 |
| To record an Information mailbox greeting..... | 108 |
| CallPilot tips | 109 |
| Troubleshooting | 111 |

Contents

| | |
|---|-----------|
| Chapter 1 | |
| Getting started | 9 |
| About this guide | 9 |
| Audience | 9 |
| Acronyms | 9 |
| Symbols and text conventions | 10 |
| Chapter 2 | |
| Using CallPilot | 13 |
| How CallPilot works | 13 |
| About display phones | 13 |
| About telephone buttons | 14 |
| Alternate extensions | 14 |
| Using CallPilot with an analog terminal adapter or an analog station module | 15 |
| Using the dialpad | 15 |
| CallPilot voice prompts | 16 |
| Auto Attendant | 18 |
| Mailbox Park and Page | 18 |
| Types of mailboxes | 19 |
| Subscriber mailbox | 19 |
| Guest mailbox | 19 |
| Information mailbox | 19 |
| Special mailboxes | 20 |
| Chapter 3 | |
| Setting up your mailbox | 21 |
| Initializing your mailbox | 21 |
| Trivial Passwords | 21 |
| Checking which mailbox interface you use | 23 |
| Opening your mailbox | 24 |
| Changing your mailbox password | 25 |
| Recording your name in the Company Directory | 26 |
| Assigning a Target Attendant | 27 |
| Mailbox Manager overview | 29 |
| Chapter 4 | |
| Feature codes and mailbox options | 31 |
| Feature codes | 31 |
| Programming a memory button with a feature code | 32 |

| | |
|---|-----------|
| Norstar Voice Mail mailbox options | 33 |
| Mailbox commands | 33 |
| Playing messages | 33 |
| Sending messages | 34 |
| Other Norstar Voice Mail options | 34 |
| CallPilot mailbox options | 35 |
| Mailbox commands | 35 |
| Playing messages | 35 |
| Sending messages | 36 |
| Other CallPilot mailbox options | 36 |
| | |
| Chapter 5 | |
| Greetings | 37 |
| Types of mailbox greetings | 37 |
| Recording a Primary or Alternate mailbox greeting | 39 |
| Choosing a Primary or Alternate mailbox greeting | 40 |
| Recording a Personalized mailbox greeting | 42 |
| Deleting a Personalized mailbox greeting | 45 |
| | |
| Chapter 6 | |
| Accessing your messages | 47 |
| Receiving calls | 47 |
| Never Full mailbox feature | 47 |
| Playing your messages | 48 |
| Retrieving erased messages | 52 |
| Screening your calls | 52 |
| Interrupting a caller | 53 |
| | |
| Chapter 7 | |
| Sending messages | 55 |
| Recording and sending messages | 55 |
| Searching the Company Directory | 59 |
| Assigning message delivery options | 60 |
| Message delivery options | 61 |
| Sending a message to more than one recipient | 65 |
| Replying to messages | 66 |
| Replying to an internal caller | 67 |
| Replying to an external caller | 68 |
| Placing a call with Thru-Dial | 69 |
| When to use Thru-Dial | 69 |

| | |
|---|------------|
| Chapter 8 | |
| Call Forwarding your calls | 71 |
| Call Forwarding your calls to your mailbox | 71 |
| Setting up Call Forward remotely | 71 |
| Call Forward with Caller ID | 72 |
| Chapter 9 | |
| Transferring calls | 75 |
| Transferring calls to a CallPilot mailbox | 75 |
| Transferring a mailbox owner's call to their mailbox | 76 |
| Transferring a call to Custom Call Routing (CCR) | 76 |
| About Outbound Transfer | 77 |
| Adding special characters to a destination number | 77 |
| Setting up Outbound Transfer | 79 |
| Turning Outbound Transfer on or off | 81 |
| Optimizing Outbound Transfer | 82 |
| Programming Outbound Transfer when CallPilot is behind a PBX | 82 |
| Chapter 10 | |
| Off-premise Message Notification | 83 |
| About Off-premise Message Notification | 83 |
| Off-premise Message Notification parameters | 84 |
| Setting up Off-premise Message Notification | 84 |
| Setting up Off-premise Message Notification to a pager number | 89 |
| Changing Off-premise Message Notification | 93 |
| Deleting a destination number | 100 |
| Adding a destination number | 101 |
| Turning Off-premise Message Notification on or off | 102 |
| Chapter 11 | |
| Recording a call | 105 |
| About Record A Call | 105 |
| Using Record A Call | 105 |
| Prerequisites | 106 |
| Chapter 12 | |
| Broadcast and Information messages | 107 |
| About Broadcast messages | 107 |
| Information mailbox greetings | 107 |
| Recording an Information mailbox greeting | 108 |

| | |
|------------------------------|------------|
| Chapter 13 | |
| CallPilot tips | 109 |
| Chapter 14 | |
| Troubleshooting | 111 |
| Glossary | 115 |
| Index | 119 |

Chapter 1

Getting started

About this guide

The *CallPilot Reference Guide* provides information on how to use CallPilot features on Business Communications Manager (BCM).

To use this guide, you must determine which phone interface you use, and follow the procedures for that interface. For information about determining which interface you use, see [“Checking which mailbox interface you use” on page 23](#). Some procedures apply to both interfaces.

If you are a new CallPilot user, make sure you are familiar with how to operate your display telephone. Refer to the User Card for your telephone.

For more information about using CallPilot, ask your System Administrator.

Audience

This guide is for system administrators and CallPilot users.

Acronyms

The following is a list of acronyms used in this guide.

Table 1

| Acronym | Description |
|---------|---------------------------------|
| ASM | Analog Station Module |
| ATM | Analog Terminal Adapter |
| BCM | Business Communications Manager |
| CCR | Custom Call Routing |
| CFAC | Call Forward All Calls |
| CFB | Call Forward on Busy |
| CFNA | Call Forward No Answer |
| CLID | Calling Line Identification |
| COS | Class of Service |
| DTMF | Dual-Tone Multifrequency |
| NVM | Norstar Voice Mail |

Symbols and text conventions

These symbols are used to Highlight critical information for the BCM50 system:



Caution: Alerts you to conditions where you can damage the equipment.



Danger: Alerts you to conditions where you can get an electrical shock.



Warning: Alerts you to conditions where you can cause the system to fail or work improperly.



Note: A Note alerts you to important information.



Tip: Alerts you to additional information that can help you perform a task.



Security note: Indicates a point of system security where a default should be changed, or where the administrator needs to make a decision about the level of security required for the system.



Warning: Alerts you to ground yourself with an antistatic grounding strap before performing the maintenance procedure.



Warning: Alerts you to remove the BCM50 main unit and expansion unit power cords from the ac outlet before performing any maintenance procedure.

These conventions and symbols are used to represent the Business Series Terminal display and dialpad.

| Convention | Example | Used for |
|---|--------------|--|
| Word in a special font (shown in the top line of the display) | Pswd: | Command line prompts on display telephones. |
| Underlined word in capital letters (shown in the bottom line of a two line display telephone) | <u>PLAY</u> | Display button option. Available on two line display telephones. Press the button directly below the option on the display to proceed. |
| Dialpad buttons | # | Buttons you press on the dialpad to select a particular option. |

These text conventions are used in this guide to indicate the information described.

| Convention | Description |
|-------------------------------------|--|
| bold Courier text | Indicates command names and options and text that you need to enter. Example: Use the info command. Example: Enter show ip {alerts routes} . |
| <i>italic text</i> | Indicates book titles |
| plain Courier text | Indicates command syntax and system output (for example, prompts and system messages). Example: Set Trap Monitor Filters |
| FEATURE HOLD RELEASE | Indicates that you press the button with the coordinating icon on whichever set you are using. |

How to get Help

This section explains how to get help for Nortel products and services.

Getting Help from the Nortel Web site

The best way to get technical support for Nortel products is from the Nortel Technical Support Web site:

<http://www.nortel.com/support>

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. More specifically, the site enables you to:

- download software, documentation, and product bulletins

- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting Help over the phone from a Nortel Solutions Center

If you don't find the information you require on the Nortel Technical Support Web site, and have a Nortel support contract, you can also get help over the phone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following Web site to obtain the phone number for your region:

<http://www.nortel.com/callus>

Getting Help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

<http://www.nortel.com/erc>

Getting Help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

Chapter 2

Using CallPilot

How CallPilot works

CallPilot works with the telephone system to provide an automated receptionist service. CallPilot answers incoming calls, routes them to extensions and mailboxes in the system, and provides message taking capability.

About display phones

One line display phones

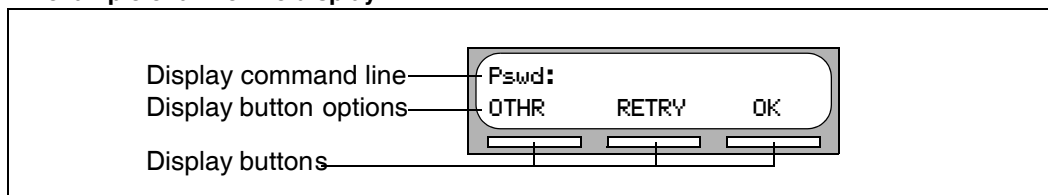
You can use one line display phones for most CallPilot sessions. If you use a one line display phone, the display shows the CallPilot display command line. A one line display phone does not show display button options.

On one line display phones, the options are announced by voice prompts. You make selections using the dialpad. You do not need to wait for the voice prompt to end before you can select an option. You can interrupt the voice prompt and make your selection immediately.

Two line display phones

 

 

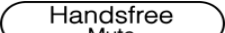

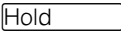

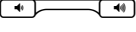
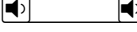


 

Two line display phones show CallPilot commands and options. A two line display can show up to three display button options at once. In cases where there are more options, wait for the voice prompt to state the other available options. If you know the corresponding dialpad number for the option you want, you can press it any time during the voice prompt.

 
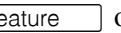
 
 

 
 
An example of a two line display





About telephone buttons

This table shows the Nortel Business Series Terminal buttons. Use the buttons that pertain to the type of telephone you use.

| Button name | T7100, T7208, T7316 | M7100, M7208, M7310, M7324 | M7100N, M7208N, M7310N, M7324N |
|----------------|---|--|---|
| Feature |  |  |  |
| Handsfree | Bottom right-hand button |  |  |
| Hold |  |  |  |
| Volume Control |  |  |  |
| Release |  |  |  |

You can enter ,  or  and the code to use a feature. For example, press     to access your mailbox.

The T7100 works differently from other telephones on your system because it does not have line buttons. Where other telephones require that you select a line button to answer a call, on the T7100 terminal you pick up the handset. Where other telephones require you to select a line button to take a call off hold, you press  on the T7100 terminal.

 

 
 
On T7100 terminals, you can answer a second call by pressing . Your active call is put on hold and you connect to the waiting call. You can have no more than two active calls at one time.



Note: If you are using a VoIP phone, please consult your IP set manual for a description of the button icons.

Alternate extensions

You can have up to five Alternate extensions for your mailbox.

If a caller dials the main extension (the primary extension for the mailbox that has Alternate extensions assigned), the call rings only at the main extension. If the call is not answered and the caller leaves a message, a message indicator appears at the main extension and any Alternate extensions. You can access the message from Alternate extensions with the Open Mailbox feature (   ), the same way that you access messages from your main extension phone. Only an extension without a mailbox assigned to it can be used as an Alternate extension.

Caller ID (CLID) is displayed on an Alternate extension only if:

- the Alternate extension is assigned to a phone with Caller ID (CLID)
- the Alternate extension has Call Display enabled
- the call at the primary set is forwarded to voicemail

If the call is not answered, the call goes to CallPilot and an audible tone occurs at all phones. For information on enabling Call Display see [“Call Forward with Caller ID” on page 72](#).

You can intercept the caller by using the Interrupt feature, , from any phone as long as the caller is still leaving a message. For more information on Interrupt see [“Interrupting a caller” on page 53](#).

Using CallPilot with an analog terminal adapter or an analog station module

One or more analog single-line sets can be connected to telephone system using an Analog Terminal Adapter (ATA) or an Analog Station Module (ASM). This type of set works with Dual-Tone MultiFrequency (DTMF) tones to allow access to CallPilot options through the dialpad only. Rotary dials cannot be used internally with CallPilot.

To access CallPilot features such as Leave Message or Open Mailbox, call the CallPilot extension and follow the voice prompts. The CallPilot Extension is the extension that the system assigns to Voicemail. You can determine the CallPilot extension by entering on any display telephone.

You can also press:

- to open your mailbox
or
- to leave a message and follow the voice prompts.

Using the dialpad

The buttons on your display telephone dialpad act as both numbers and letters. Each button represents a number and letters of the alphabet.

| | |
|------------------------------|---|
| To enter a character | press the dialpad button that represents the letter or number. Press the button again to see the next letter or number. |
| To accept a character | press <input type="text" value="#"/> or press a different button. When you press another button, the cursor advances and the display shows the first character on the new button. |
| To delete a character | press the <u>BKSP</u> display button. |

Numbers and letters on the dialpad.

| | | |
|---------------------|-----------------|--|
| 1 1 ' - | 2 A B C 2 a b c | 3 D E F 3 d e f |
| 4 G H I 4 g h i | 5 J K L 5 j k l | 6 M N O 6 m n o |
| 7 P Q R S 7 p q r s | 8 T U V 8 t u v | 9 W X Y Z 9 w x y z |
| * Quit | 0 Q Z Zero q z | # Accepts displayed letter and, (comma) |

The display can show up to 16 characters. Whether the prompt remains on the display depends on the prompt. The examples on this page show how the prompt can appear.

An example of a display with fewer than 16 characters, where the command line prompt remains on the display is the **Pswd:** command line prompt.

```
Pswd:
OTHR  RETRY  OK
```

The prompt disappears for these command line prompts:

- Name:
- Log:
- Dest ph:

This display shows the **Name:** command line prompt:

```
Name:
RETRY  BKSP  OK
```

When you begin to enter the last name, the **Name:** command line prompt disappears. For example, if you enter the name Partridge, you press the dialpad button **7** for P, and the display drops the **Name:** prompt.

```
P
RETRY  BKSP  OK
```

Although the name is only nine characters long, the command line prompt is not shown on the display after you enter the entire name.

```
Partridge
RETRY  BKSP  OK
```

CallPilot voice prompts

Voice prompts announce which dialpad button to press to use CallPilot options. Voice prompts provide the same options as display buttons. Prompts also provide options that do not appear on the display. If you use a two line display phone, you can use either the display button or the dialpad button to access the option.

On a one line display phone the voice prompt plays immediately. If you do not choose an option after five seconds, the voice prompt replays the options. If you still do not choose an option, CallPilot ends the session.

On a two line display phone the voice prompt plays after a few seconds delay. If you do not choose an option, CallPilot ends the session.

Interrupting a voice prompt

You can interrupt a voice prompt by selecting any option on the display or dialpad.

Auto Attendant

The Auto Attendant acts as a receptionist for incoming calls. When it is enabled, the Auto Attendant answers your company's incoming phone lines depending on the time of day. If callers know which option they want, they can interrupt the Auto Attendant by entering their selection on the dialpad of any tone-dial phone.

The Auto Attendant provides callers with the voice prompts associated with:

- entering a mailbox number
- entering the extension
- using the Company Directory
- leaving a message
- reaching the Operator
- selecting an Alternate Language* (there is no voice prompt for this option)

* If CallPilot is installed with bilingual capabilities, callers can press **9** to hear voice prompts in the other language.

When a caller selects an option, the Auto Attendant responds to the command either by routing the call to an extension or mailbox within your company, or by directing the caller to the Company Directory or the Operator.

Mailbox Park and Page

With Mailbox Park and Page, external callers can press **6** during your personal greeting or after they have recorded a message to have you paged. If internal callers press **6**, the call goes directly to the record tone.

When you are paged, the system plays your mailbox spoken name and where the call is located, for example "John Doe, 101."

If you have Mailbox Park and Page enabled for your mailbox, you must let callers know that they can page you as part of your mailbox greeting, for example, "I'm not at my desk. To have me paged, press 6, otherwise leave a message at the tone."

Ask your System Administrator whether you have Mailbox Park and Page enabled for your mailbox.

Types of mailboxes

A mailbox is a storage place for messages. There are three types of mailboxes:

- Subscriber mailboxes, which include Guest mailboxes
- Information mailboxes
- Special mailboxes, which include the General Delivery Mailbox and the System Administrator Mailbox

Other types of mailboxes are available on your system if you have the Network Messaging or the Fax option installed.

Subscriber mailbox

Most users have Subscriber mailboxes. A Subscriber mailbox is assigned by the System Administrator and is maintained by the mailbox owner. A Guest mailbox is a type of Subscriber mailbox.

A Subscriber mailbox can be assigned to each mailbox owner who has an operating display telephone with an extension.

Guest mailbox

Guest mailboxes provide temporary employees and guests with access to internal messaging and call routing features. Guest mailboxes do not have an operating extension. They are assigned a number that looks and works like an extension. This lets the Guest mailbox owner access CallPilot the same way a subscriber accesses their mailbox from another extension or phone. If you need a Guest mailbox, request one from the System Administrator.

Information mailbox

Information mailboxes play informative messages to callers. Information mailboxes do not have an operating extension, and callers cannot leave a message in them. A voice prompt provides callers with access to Information mailboxes. Callers reach an Information mailbox through the Auto Attendant, Custom Call Routing (CCR) or the Operator.

Information mailboxes are created by the System Administrator, and either the System Administrator or a mailbox owner can record Information mailbox greetings. For more information on Information mailbox greetings, see [“Information mailbox greetings” on page 107](#).

Special mailboxes

Special mailboxes are set up automatically when CallPilot is initialized.

The Special mailboxes include:

- General Delivery Mailbox
- System Administrator Mailbox

General Delivery Mailbox

The General Delivery Mailbox stores messages:

- from callers who use a rotary dial phone
- for people in your company who do not have Subscriber mailboxes

The System Administrator, Receptionist or designated Operator can access the messages in the General Delivery Mailbox and send them to the appropriate mailbox.

System Administrator Mailbox

This mailbox is used by your System Administrator as a personal mailbox. You can leave messages for the System Administrator in this mailbox. Broadcast messages must be sent from the System Administrator Mailbox.

Chapter 3

Setting up your mailbox

This chapter describes how to set up your mailbox and explains:

- [Initializing your mailbox](#)
- [Checking which mailbox interface you use](#)
- [Opening your mailbox](#)
- [Changing your mailbox password](#)
- [Recording your name in the Company Directory](#)
- [Assigning a Target Attendant](#)



Note: After your mailbox is assigned, you can initialize and manage your mailbox using a telephone and F981 or online using Mailbox Manager. For information on Mailbox Manager, see [“Mailbox Manager overview” on page 29](#).

Initializing your mailbox

Initializing your mailbox prepares your mailbox to receive messages. Your mailbox cannot receive and store messages until it is initialized.

Initializing your mailbox involves:

- choosing a password from four to eight digits long that does not start with zero
- changing the CallPilot default password (0000) to your password
- recording your name in the Company Directory

Trivial Passwords

 
Your system administrator may configure CallPilot to not accept trivial passwords. If the administrator enables the feature, the password you create for your mailbox must not be a trivial password. Trivial password checking prevents unauthorized login to mailboxes. The following are trivial passwords:


- the password is the same as the mailbox number
- all numbers of the password are the same digits (1111, 3333)
- digits of the password are consecutive numbers in increasing or decreasing order (1234, 2345, 43210)


Alphanumeric passwords entered in CallPilot Manager are converted to numeric-only passwords before they are validated. For example, the CallPilot Manager password ADIJM might not look trivial, but it is a trivial password when it is converted to numeric equivalent password 23456.

If the password is trivial, CallPilot prompts you with a text prompt of *Trivial password* on your set display. If you have a single display set you hear a voice prompt, “*You have entered an invalid password. Please enter your new password and then press the number sign.*” You must enter a new password.

To initialize your mailbox



 

- 1 Press  9 8 1.
- 2 Log on by following the voice prompts or the display button options.
- 3 This display appears briefly to indicate that you must change your password.


Must change pswd
- 4 Enter a new password from four to eight digits long that does not start with zero. Press OK or .

Pswd:
RETRY OK
- 5 Reenter your new mailbox password and press OK or .

Again:
RETRY OK
- 6 At the tone, record your name in the Company Directory. Include your mailbox number in the recording, For example, “Pat Smith, mailbox 5813.”

Record name:
RETRY OK

Press OK or  to end the recording.
- 7 Press OK or  to accept the recording or press PLAY or  to listen to the recording or press RETRY or  to re-record your name.

Accept name?
RETRY PLAY OK
- 8 Press  to end the session.

After you initialize your mailbox, record your mailbox greetings.

Refer to “[Recording a Primary or Alternate mailbox greeting](#)” on page 39 for more information. If you do not record a Personal greeting, your Company Directory name plays to callers who reach your mailbox.



Note: You can also initialize your mailbox using Mailbox Manager. See “[Mailbox Manager overview](#)” on page 29.

Checking which mailbox interface you use

CallPilot supports two interfaces: Norstar Voice Mail and CallPilot. The System Administrator determines which interface is assigned to your mailbox.

Use this procedure to check which mailbox interface you use, then follow the procedures in the guide that apply to the interface you use.

Some procedures apply to both interfaces.

To check which mailbox interface you use

- 1 Press **[*] 9 [8] 1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 Check the display to see which interface you use:

```
0 new 0 saved
PLAY REC ADMIN
```

This is the Norstar Voice Mail interface.

```
No messages
COMP MBOX EXIT
```

This is the CallPilot interface.

- 3 Press **[*]** to end the session.

Opening your mailbox

After you initialize your mailbox you can open it from:

- your own extension
- another CallPilot extension
- an outside tone dial phone

To open an initialized mailbox - Norstar Voice Mail

1 Press .

Pswd:
OTHR RETRY OK

2 Enter your mailbox password and press **OK** or
or
if you are at another extension, or if you are using a Guest mailbox, press **OTHR** or to display the **Log:** prompt.

When this prompt appears, enter your mailbox number and password. Your mailbox number is usually the same as your extension.

To open an initialized mailbox - CallPilot

1 Press .

Mbox:
RETRY **OK**

2 Press
or
if you are at another extension, enter your mailbox number and then press **OK** or .

Your mailbox number is normally the same as your extension.

Pswd:
RETRY **OK**

3 Enter your mailbox password and press **OK** or .

To open your mailbox using Auto-Login

If your System Administrator has enabled Auto-Login for your mailbox, you can open your mailbox by pressing . You do not need to enter your mailbox number or password. You can use Auto-Login only from your primary or alternate telephones. Ask your System Administrator whether you can use Auto-Login.

To open your mailbox remotely

- 1 To open your CallPilot mailbox from an outside tone dial phone, during your greeting press * * or enter the CallPilot extension number to open your mailbox. If you are in Europe or Australia press 8 8 or enter the CallPilot extension number.
- 2 Follow the voice prompts to enter your mailbox number and password.

Changing your mailbox password

You can change your mailbox password at any time. A password must be from four to eight digits long and cannot start with zero. It is recommended that you change your password every 30 days.

Keep your mailbox secure by choosing an uncommon password, not a predictable password like 1234 or 1111. You may not be allowed to enter a trivial password. (Refer to [“Trivial Passwords” on page 21](#) for more information.) Avoid giving your password to your co-workers. If someone else knows your password, they can access your mailbox and listen to or delete your messages.

To change your password

1 Press **[*] 9 [8] 1**.
Follow the voice prompts or the display buttons to open your mailbox.

2 If you use the CallPilot interface:

- Press **[8] [4]** to open the Mailbox Password menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **PSWD** or **[4]**
- Go to step 3

Pswd:
RETRY **OK**

Again:
RETRY **OK**

3 Enter your new mailbox password and press **OK** or **[#]**.

4 Re-enter your new mailbox password and press **OK** or **[#]**.

5 Press **[*]** to end the session.

Password lock-out

For security reasons, the System Administrator can assign each mailbox a maximum number of incorrect password attempts. If the number is reached, you are locked out. You cannot access your mailbox until the password is reset. Ask your System Administrator to reset the password. The password when reset is 0000.

Password expiry

Mailboxes can be assigned a maximum number of days that a password remains active. If you open your mailbox after your password expires, you hear the message *“Your current password has expired. You must change your password. Please enter your new password, then press [#].”*

Recording your name in the Company Directory

The Company Directory is a list of mailbox users on the CallPilot system. Before you can use your mailbox to receive messages, you must record your spoken name in the Company Directory. It is a good idea to include your mailbox number in your Company Directory recording. For example *“Pat Smith, mailbox 5813.”*

This establishes your “voice” name in a directory that is used by other CallPilot users and outside callers who use the Company Directory.

If you do not want your name in the Company Directory, tell your System Administrator. The Company Directory feature can be disabled by the System Administrator. If you do not know whether you have this feature, ask your System Administrator.

You can change or re-record your name in the Company Directory at any time.

To record your name in the Company Directory

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[*] 2 9** to open the Company Directory
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[*]**
- Press **[1]**. This is a voice prompt and does not appear as a display button.
- Go to step 3

```
Record name?
RETRY  OK
```

```
Accept name?
RETRY  PLAY  OK
```

- 3 At the tone, record your name.
Press **OK** or **#[*]** to end the recording.
- 4 Press **OK** or **#[*]** to accept the recording
or
press **PLAY** or **[1]** to listen to the recording
or
press **RETRY** or **[2]** to re-record your name.
- 5 Press **[*]** to end the session.

Assigning a Target Attendant

You can assign a Target Attendant to answer calls transferred from your mailbox. The default Target Attendant for your mailbox is the CallPilot Operator. The Target Attendant can be assigned to any valid extension.

After you assign your Target Attendant, a caller who reaches your mailbox can press **[0]** to speak with the Target Attendant. If you do not have a Target Attendant assigned, callers who press **[0]** return to your mailbox.

Remember to tell callers in your greetings that if they need assistance they can press **[0]** to speak to the Target Attendant. For example, *“Please press [0] to speak to my assistant.”*

To assign a personal Target Attendant

1 Press **☎ 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.

2 If you use the CallPilot interface:

- Press **8 0** to open the Company Directory
- Press **ASST** or **1** to open the Target Attendant menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **5** to open the Target Attendant menu
- Go to step 3

```
Atdt ext: oper
CHNG          QUIT
```

```
Ext:
RETRY       OPER
```

```
Atdt ext:<xxxx>
CHNG          QUIT
```

3 Press **CHNG** or **1** to change the Target Attendant.

The **Atdt ext: oper** prompt shows that the current attendant is the CallPilot operator.

4 Enter the extension number of the new Target Attendant or press **OPER** or **0** to change the Target Attendant to the CallPilot Operator.

5 The display shows the extension you entered.

6 Press **☎** to end the session.

Mailbox Manager overview

Mailbox Manager is a Web-based application that allows you to manage your CallPilot mailbox online. You access Mailbox Manager at <https://<BCMIPaddressOrHostName>/MailboxManager>.

Although Mailbox Manager should operate correctly on a broad range of client browsers and operating systems, it is only tested and supported on Internet Explorer and Netscape on Windows operating systems.



Note: You can administer Subscriber mailboxes, Information mailboxes, Contact Center skillset mailboxes, General Delivery mailbox, and System Administrator mailbox through Mailbox Manager. If you try to access other types of mailboxes, you receive a warning message.

Mailbox Manager has the following interfaces and the associated functionality for subscriber, General Delivery, and the System Administrator mailboxes:

- [“My Mailbox main menu”](#)
- [“Off Premise Notification”](#)
- [“Password Change”](#)
- [“Outbound transfer settings”](#)
- [“Spoken Name, Primary, Alternate and Personalized Greetings \(import, export, play, and record\)”](#)
- [“Personal Attendant DN”](#)
- [“Fax settings”](#)
- [“Call forward to voicemail and display CLID”](#)

My Mailbox main menu

- Welcome message
- number of messages for each applicable message type
- applicable warning information
- notice about Off Premise Notification and Outbound Transfer

Off Premise Notification

- check box to toggle the feature on or off
- destination table for notification destinations
- start and end times for notification
- message types for notification

Password Change

- ensures password is only digits and letters, four to eight characters, the new password and its confirmation are identical, and if Trivial Password Checking is enabled that trivial passwords are not permitted. For information on Trivial Passwords see [“Trivial Passwords” on page 21](#).

Outbound transfer settings

This interface displays if the mailbox class of service and outcalling capabilities are sufficient.

- extension or telephone number radio button with associated text box
- check box to allow callers to reach specified outbound destination

Spoken Name, Primary, Alternate and Personalized Greetings (import, export, play, and record)

- Voice buttons for Spoken Name, Standard Greetings and Personalized Greetings to allow the user to record greetings
- Primary or Alternate greeting radio button
- check boxes to not accept messages and to remove personalized greetings; for each personalized greeting, we also have a telephone number for which the personalized greeting will be played.

Personal Attendant DN

- extension (with associated text box) or System Attendant radio button

Fax settings

This interface displays if the fax messaging keycode has been applied and mailbox has sufficient outcalling capabilities. This form is available when the fax messaging keycode has been applied. If the mailbox has sufficient outcalling capabilities, both extension and telephone selections are shown. If the mailbox does not have outcalling capabilities, only the extension is shown.

- extension or telephone radio button and text box

Call forward to voicemail and display CLID

- forward calls to voicemail check box
- display caller information check box

 

 
 


 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


Note: The functionality for Information mailboxes is limited to the My Mailbox Welcome message, Password Change, Spoken Name, Primary Greetings, and Alternate Greeting (if CallPilot is configured as bilingual).

Chapter 4

Feature codes and mailbox options

Feature codes

| Feature code name | Dialpad buttons | Description |
|---------------------|---|--|
| Leave Message |    | Leaves a message in a mailbox. No password is required. |
| Open Mailbox |    | Opens your mailbox to play your messages and to access mailbox options. |
| Call Forward |    | Forwards incoming calls to your mailbox. |
| CallPilot extension |    | Displays the CallPilot extension number on your phone. |
| Transfer |    | Transfers calls to a mailbox on the CallPilot system. |
| Interrupt |    | Intercepts a caller who is listening to your mailbox greeting or leaving a message. |
| Name Dialing |    | Lets you dial calls by searching the Company Directory. |
| Record A Call |    | Records a call and stores it in your mailbox. This feature also stores the message in a network location if one is specified in the Class of Service to which the subscriber mailbox belongs or in the agent's parameters. |
| MeetMe Conferencing |    | Establishes a teleconference by each calling into a specified telephone number and extension at an agreed-upon time. |

Ask your System Administrator about additional feature codes that may be available.

For information on programming a feature code onto a memory button of a display phone, see [“Programming a memory button with a feature code” on page 32.](#)

Programming a memory button with a feature code

Each CallPilot feature code can be programmed to a single memory button.

Program Features

Press a button
QUIT

Feature Code:
QUIT

F_
QUIT CLEAR

Programmed

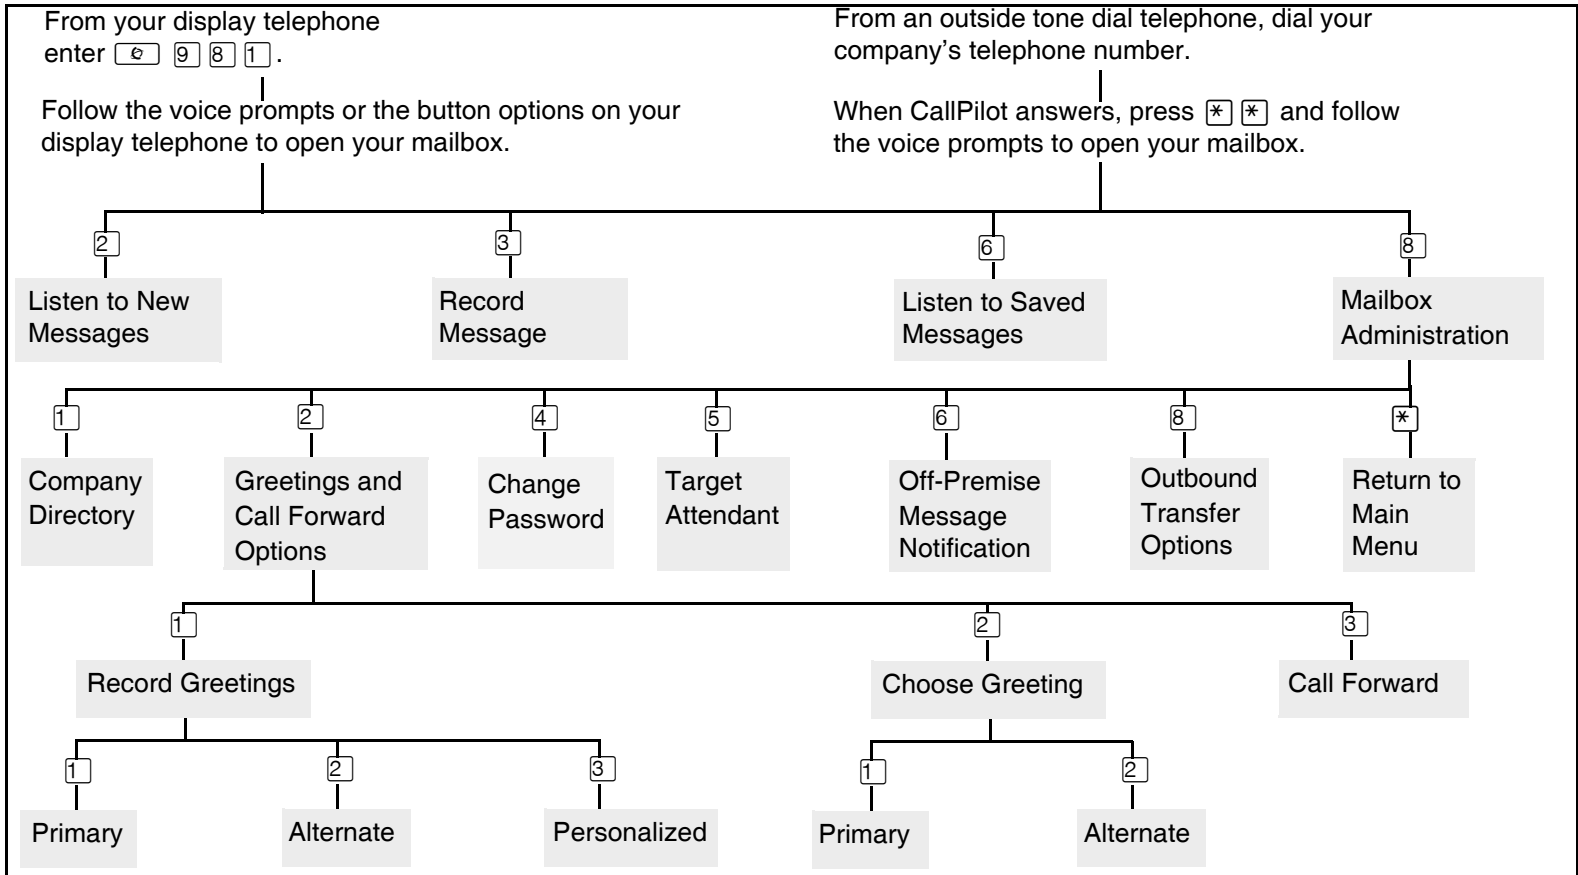
- 1 Press .
Do not lift your handset.
- 2 The display shows **Program Features**.
- 3 Press a memory button with an LCD indicator.
- 4 Press .
- 5 Enter the feature code number that you want to program.
For example, enter to program the Leave Message feature code. See the table “[Feature codes](#)” on [page 31](#) for the feature codes.

Repeat steps 1 through 5 for each feature code you want to program.
- 6 The display shows that the button is programmed, and then ends the session.

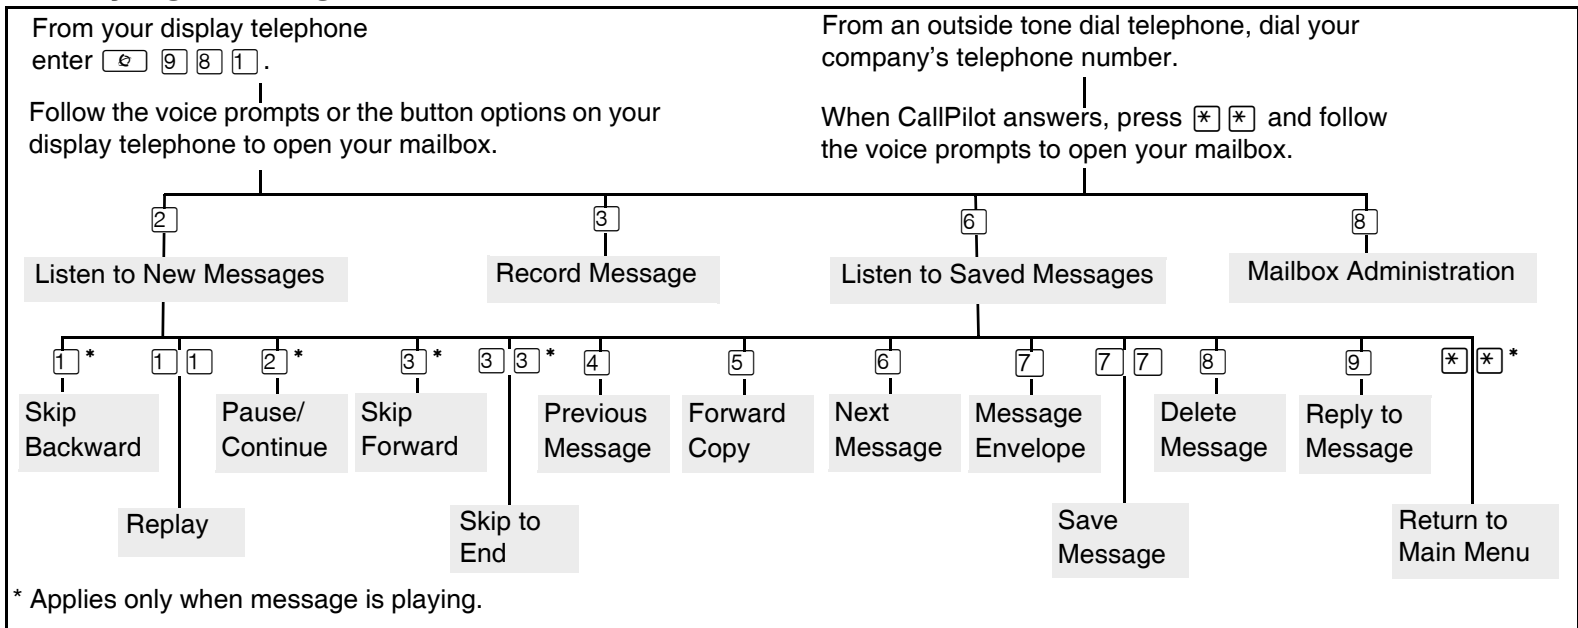
Use the paper labels that come with your telephone to identify the programmed button. To use the feature, press the labeled button.

Norstar Voice Mail mailbox options

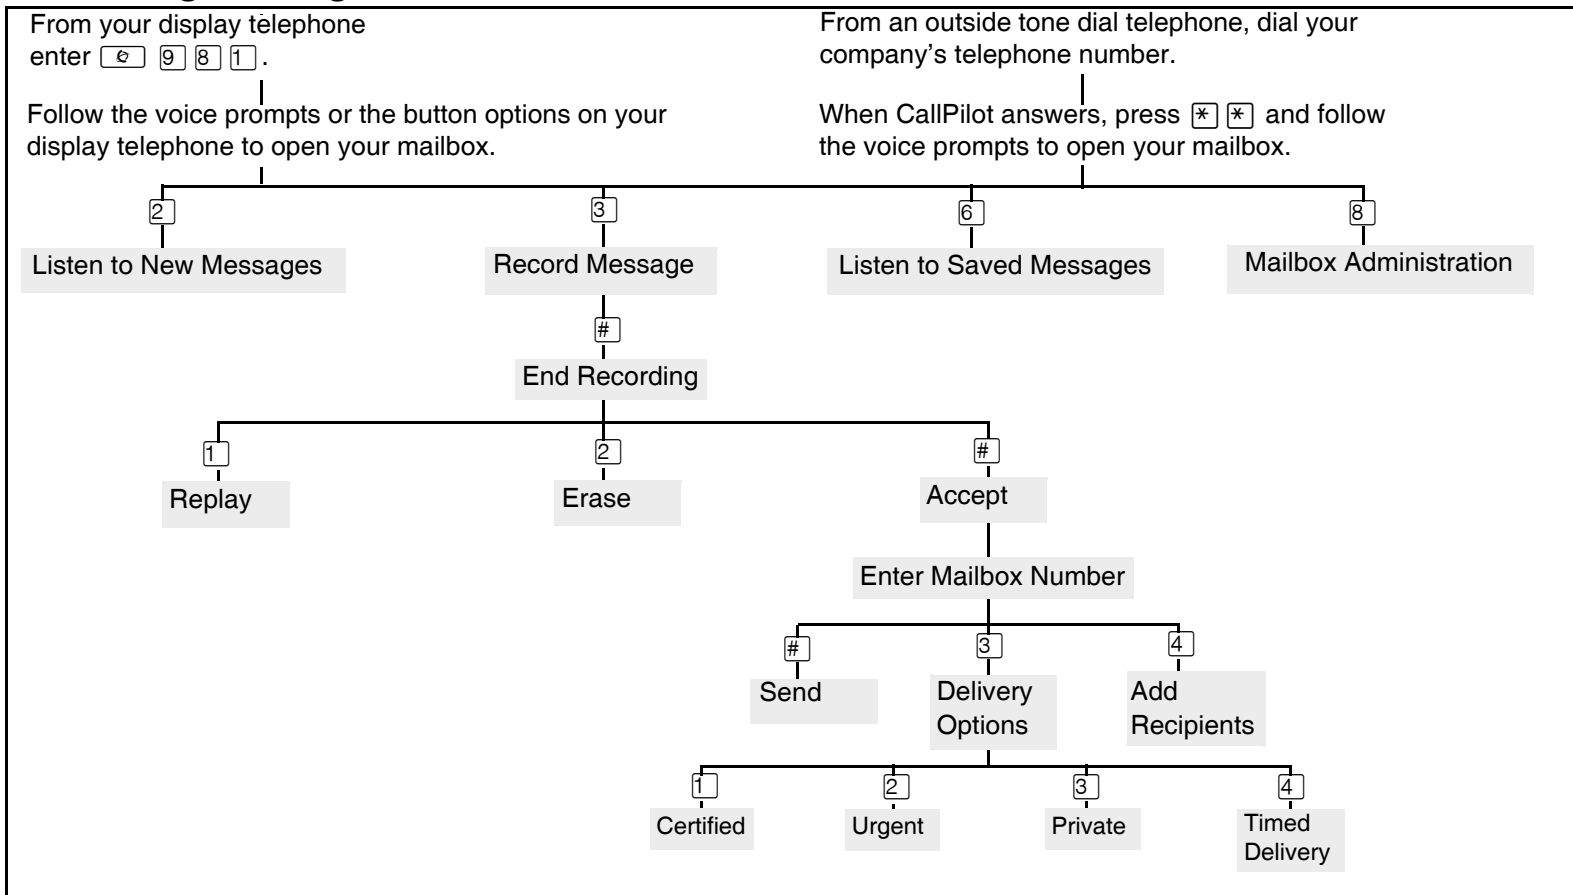
Mailbox commands



Playing messages



Sending messages

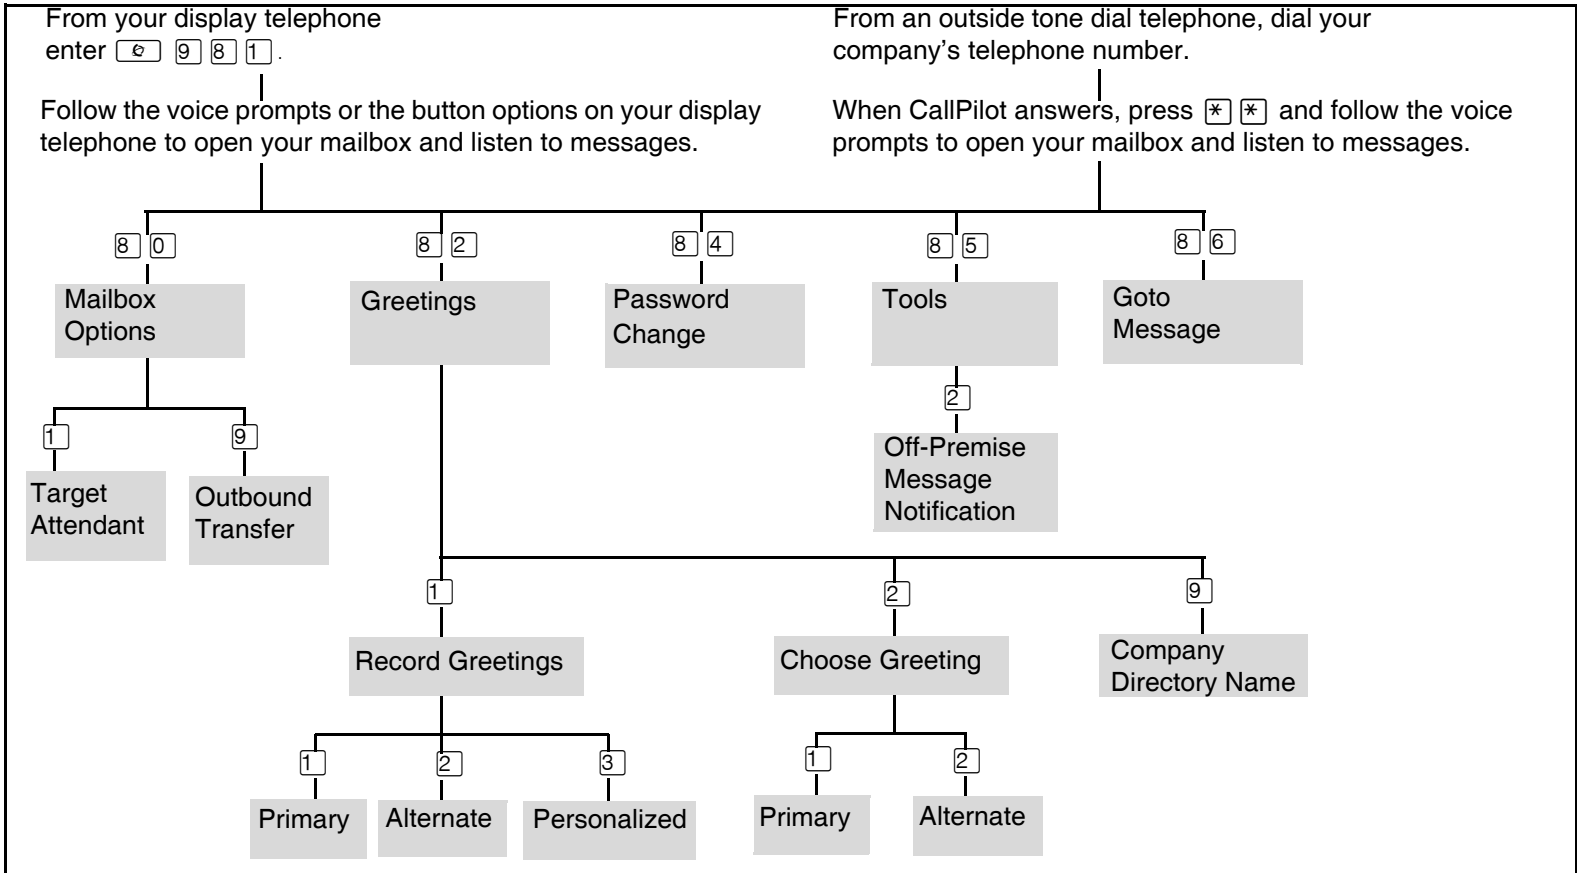


Other Norstar Voice Mail options

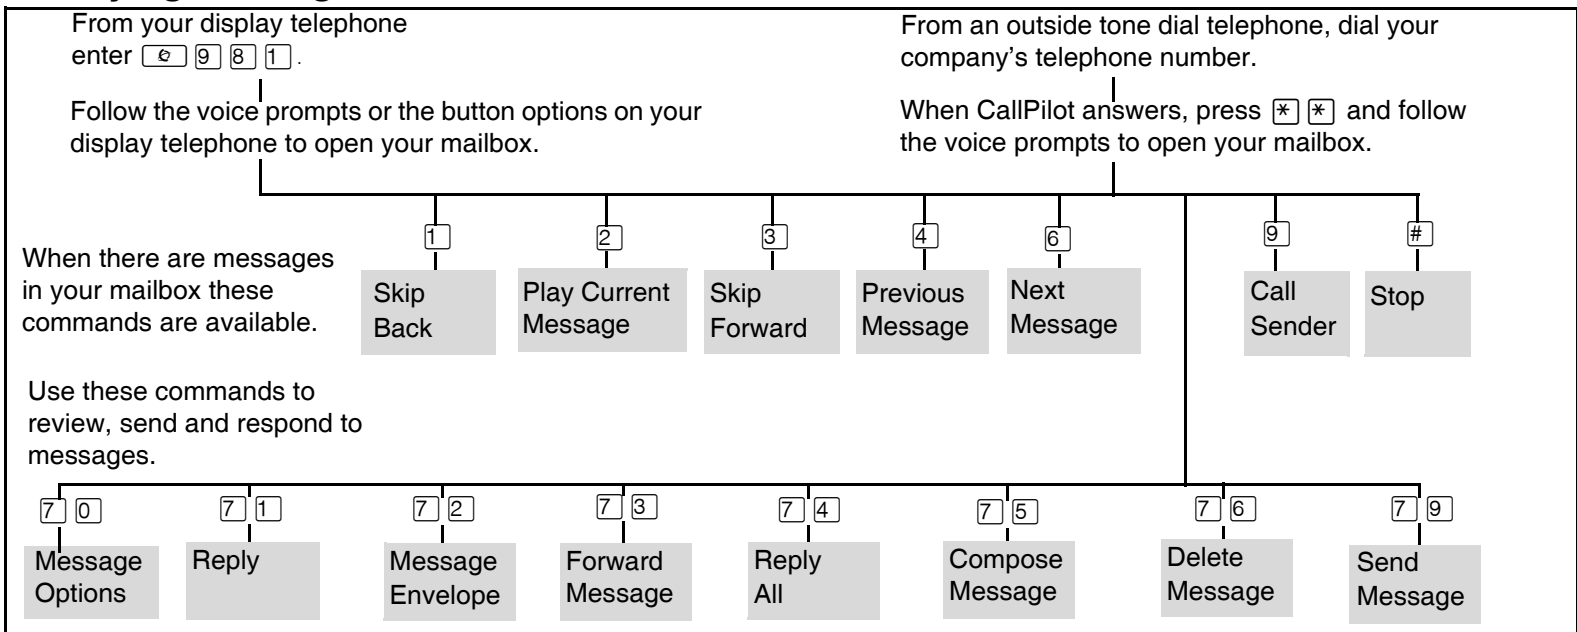
| Mailbox option | Description | Page |
|----------------------------|---|----------|
| Greetings and Call Forward | Record and select Personal mailbox greetings. Forward calls directly to your mailbox. | 42 71 |
| Off-premise Notification | Set up Off-premise Notification parameters for messages left in your mailbox. | 84 |
| Record message | Record and send a message. | 55 |
| Auto Attendant | Go to the Auto Attendant Menu options. | -- |
| Company Directory | Record your name in the Company Directory. | 26 |
| Listen to new messages | Play any new messages in your mailbox. | 48 |
| Change Password | Change your mailbox password. | 25 |
| Target Attendant | Assign a Target Attendant to answer calls transferred from your mailbox. | 27 |
| Outbound Transfer | Set up Outbound Transfer to transfer callers from your mailbox to an internal extension or to an external telephone number. | 77 |

CallPilot mailbox options

Mailbox commands



Playing messages



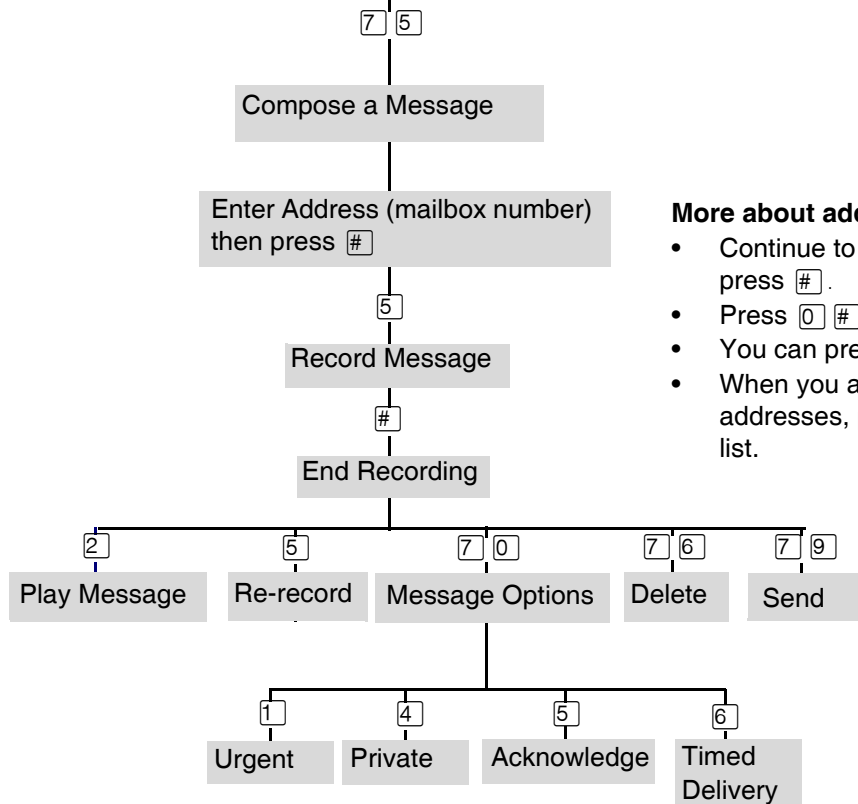
Sending messages

From your display telephone enter **7 9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox.

From an outside tone dial telephone, dial your company's telephone number.

When CallPilot answers, press *** *** and follow the voice prompts to open your mailbox.



More about addresses:

- Continue to enter addresses and then press **#**.
- Press **0 #** to cancel an address.
- You can press **1 1** to dial by name.
- When you are finished entering addresses, press **#** again to end the list.

Other CallPilot mailbox options

| Mailbox option | Description | Page |
|--------------------------|--|--------------------|
| Greetings | Record and select personal mailbox greetings. | 42 |
| Password Change | Change your mailbox password. | 25 |
| Off-premise Notification | Set up Off-premise Notification parameters for messages left in your mailbox. | 84 |
| Goto Message | Enter a specific message number and go to that message: <ul style="list-style-type: none"> • Press FIRST or 1 to go to the first message in your mailbox. • Press LAST or 2 to go to the last message in your mailbox. | |
| Personal Verification | Record your name in the Company Directory. | 27 |
| Target Attendant | Assign a Target Attendant to answer calls transferred from your mailbox. | 27 |
| Outbound Transfer | Set up Outbound Transfer to transfer callers from your mailbox to an internal extension or an external telephone number. | 77 |

Chapter 5

Greetings

This chapter describes mailbox greetings and how to record them.

This chapter includes:

- [Types of mailbox greetings](#)
- [Recording a Primary or Alternate mailbox greeting](#)
- [Recording a Personalized mailbox greeting](#)
- [Deleting a Personalized mailbox greeting](#)

Types of mailbox greetings

Mailbox greetings play to callers who reach your mailbox. Greetings inform callers that they have reached the correct mailbox and give callers any necessary information or instructions. You can change the greetings at any time.

After you initialize your mailbox, you can record greetings. If you do not record any greetings, your Company Directory name plays to callers who reach your mailbox. Refer to [“To record your name in the Company Directory” on page 27](#).

There are three types of mailbox greetings: Primary, Alternate and Personalized.

Primary mailbox greeting

Record your Primary mailbox greeting for everyday use. In this greeting include your name and a brief message explaining to callers that you are unable to answer their calls.

For example, *“Hi. This is Pat Smith. I’m not able to take your call right now. Please leave me a message at the tone and I will return your call as soon as possible.”*

If you are a new mailbox owner, record your Primary mailbox greeting immediately.



Note: If you have Park and Page enabled for your mailbox, you must let callers know that they can page you as part of your mailbox greeting, for example, *“I’m not at my desk. To have me paged, press 6, otherwise leave a message at the tone.”*

Ask your System Administrator whether you have Park and Page enabled for your mailbox.

For information about Park and Page, see [“Mailbox Park and Page” on page 18](#).

Alternate mailbox greeting

The Alternate mailbox greeting is usually used for special circumstances.

For example, *“Hi. This is Pat Smith. I am out of the office until Thursday, the 17th of December. Although I am out of the office, I do check my mailbox daily. Please leave me a message at the tone and I will return your call as soon as possible. Thank you.”*

After you record your greetings, you must choose which greeting you want CallPilot to play. You can change the selection at any time.

Personalized mailbox greeting

Personalized mailbox greetings are available only if your company subscribes to Caller ID (CLID) service from your local telephone company. For more information about CLID, ask your System Administrator.

A Personalized mailbox greeting plays to callers based on the caller’s telephone number. CallPilot recognizes the assigned incoming telephone number and plays the Personalized mailbox greeting.

For example, *“Hi Susan. I may have missed your call, but I don’t want to miss meeting you for lunch. See you at noon.”*



Note: A Personalized greeting takes precedence over an Alternate greeting if the Alternate greeting is accepting messages. This means that if you have a Personalized greeting, and you record an Alternate greeting such as a vacation alert, the Personalized greeting will continue to play for the appropriate Caller ID, and those callers will hear your Personalized greeting, rather than the Alternate one. If the Accepting Messages option is set to No, the caller will hear the Alternate greeting.

Recording technique for mailbox greetings

When you record your mailbox greetings, remember to speak clearly and at a pace that is easy to understand. After you record a greeting, you can replay it before you accept it. You can record or change a greeting from any display telephone.

If you are away from the office, you can record a greeting from any tone dial telephone. When you record a greeting, do not use the Handsfree feature. You get better results if you speak directly into the handset.



Note: Recorded greetings count towards the storage capacity of a mailbox. Avoid recording long greetings if possible. If recorded greetings are long, there will be less storage time in the mailbox for messages.

Recording a Primary or Alternate mailbox greeting

Only a Primary mailbox greeting is necessary, but you can record an Alternate mailbox greeting for times when you are out of the office, such as vacations. If you do not record any mailbox greetings, your Company Directory name recording plays to callers who reach your mailbox.

If you record both Primary and Alternate mailbox greetings, you must choose which greeting plays. If you do not choose a greeting, the Primary mailbox greeting automatically plays. For information on how to choose a greeting, see [“Choosing a Primary or Alternate mailbox greeting” on page 40](#)”.



Note: Recorded greetings count towards the storage capacity of a mailbox. Avoid recording long greetings if possible. If recorded greetings are long, there will be less storage time in the mailbox for messages.

To record a Primary or Alternate mailbox greeting

- 1 Press **[*]** **[9]** **[8]** **[1]**.

Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8]** **[2]** to open the Greetings Options menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **GREET** or **[2]**
- Go to step 3

- 3 Press **REC** or **[1]**.

- 4 Press **PRIME** or **[1]** to record the Primary greeting or press **ALT** or **[2]** to record the Alternate greeting. If you are changing a greeting, the current greeting starts to play.

```
Greeting options
REC  CHOOSE  CFWD
```

```
Greeting:
PRIME  ALT  PERS
```

```
Not recorded
```

```
Record now?
YES  NO  QUIT
```

```
Record greeting:
RETRY  OK
```

```
Accept greeting?
RETRY  PLAY  OK
```

- 5 If this is the first time you are recording a greeting, this display appears briefly.

- 6 Press **YES** or **[1]** and record your greeting at the tone.

- 7 Press **OK** or **#** to end the recording.

- 8 Press **OK** or **#** to accept the recording or press **PLAY** or **[1]** to listen to the greeting or press **RETRY** or **[2]** to rerecord the greeting.

- 9 Press **[*]** to end the session.

Choosing a Primary or Alternate mailbox greeting

If you record a Primary and an Alternate mailbox greeting, you must choose which greeting plays. If you do not choose a greeting, the Primary mailbox greeting plays automatically.

If you choose the Alternate mailbox greeting, you must set whether the mailbox accepts messages. If you choose Yes your mailbox receives messages in the usual way.

If you choose No:

- Messages cannot be left in the mailbox.
- The Alternate mailbox greeting takes precedence over all other greetings.
- If a caller presses a button to fast forward the message, they hear a voice prompt that says this is a special greeting.
- If a caller presses a button to send a fax, the fax goes to the General Delivery Mailbox, not your personal mailbox.

If you choose the Alternate mailbox greeting, remember to change back to the Primary mailbox greeting at the appropriate time.

To choose a Primary or Alternate mailbox greeting

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[8] [2]** to open the Greetings Options menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **GREET** or **[2]**
- Go to step 3

```
Greeting options
REC  CHOOSE  CFWD
```

```
Use greeting:
PRIME  ALT  QUIT
```

- 3 Press **CHOOSE** or **[2]** to select a greeting.
- 4 Press **PRIME** or **[1]** to select the Primary mailbox greeting and go to step 6
or
press **ALT** or **[2]** to select the Alternate mailbox greeting and go to step 5.
- 5 If you choose the Alternate mailbox greeting, you are asked whether the mailbox can accept messages.
Press **CHNG** or **[1]** to toggle from yes to no
or
press **OK** or **#** to accept.
- 6 Press **[*]** to end the session.

```
Accept msgs:Y
CHNG          OK
```



Note: If you choose a greeting that is not yet recorded, you are transferred back to the Greeting Options menu to record the greeting.

Recording a Personalized mailbox greeting

If your company subscribes to a CLID service, you can record a Personalized mailbox greeting. For more information about CLID, ask your System Administrator. A Personalized mailbox greeting plays only for a person calling from the telephone number that you designate. For the Personalized mailbox greeting to play, the telephone number you enter must match the caller's phone number exactly.

You can record up to three Personalized mailbox greetings, but you can assign each greeting to only one telephone number.

If you record a Personalized greeting, program your mailbox to receive messages and choose an Alternate mailbox greeting, the Personalized greeting takes precedence over any other greetings. If you program your mailbox not to receive messages and choose an Alternate mailbox greeting, the Alternate mailbox greeting takes precedence over any other greeting, including Personalized mailbox greetings.



Note: Recorded greetings count towards the storage capacity of a mailbox. Avoid recording long greetings if possible. If recorded greetings are long, there will be less storage time in the mailbox for messages.

To record a Personalized mailbox greeting

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[8] 2** to open the Greetings Options menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **GREET** or **[2]**
- Go to step 3

```
Greeting options
REC  CHOOSE  CFWD
```

```
Greeting:
PRIME  ALT  PERS
```

```
Greeting:
RETRY  OK
```

```
Ph:<none>
CHNG  OK
```

```
Ph:
RETRY  OK
```

```
Record Greeting:
RETRY  OK
```

- 3 Press **REC** or **[1]**.
- 4 Press **PERS** or **[3]** to record a Personalized mailbox greeting.
- 5 Enter a Personalized greeting number of 1, 2, or 3.
- 6 Press **CHNG** or **[1]**.
- 7 Enter the phone number (maximum 10 digits) that you are assigning the Personalized mailbox greeting to.
Press **OK** or **[#]** to accept the phone number. You must always include the area code with the telephone number.
- 8 At the tone, record the greeting and press **OK** or **[#]** to end the recording.

Accept greeting?
RETRY PLAY OK

- 9 Press **OK** or **#** to accept the recording
or
press **PLAY** or **1** to listen to the greeting
or
press **RETRY** or **2** to rerecord the greeting.
- 10 Press **⏏** to end the session.

Deleting a Personalized mailbox greeting

If you no longer need a Personalized mailbox greeting, you can delete it.

To delete a Personalized mailbox greeting

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[8] 2** to open the Greetings Options menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
 - Press **GREET** or **[2]**
 - Go to step 3
- 3 Press **REC** or **[1]**.
 - 4 Press **PERS** or **[3]** to choose a Personalized mailbox greeting.
 - 5 Enter the Personalized greeting number (1, 2, or 3) that you want to delete.
 - 6 Press **DEL** or **[2]** to delete the greeting.
 - 7 Press **[END]** to end the session.

```
Greeting options
REC  CHOOSE  CFWD
```

```
Greeting:
PRIME  ALT  PERS
```

```
Greeting:
RETRY                OK
```

```
Ph: XXXXXXXX
CHNG  DEL  OK
```

Chapter 6

Accessing your messages

This chapter describes how to access your messages and explains:

- [Receiving calls](#)
- [Never Full mailbox feature](#)
- [Playing your messages](#)
- [Retrieving erased messages](#)
- [Screening your calls](#)
- [Interrupting a caller](#)

Receiving calls

CallPilot can be used by outside callers and other mailbox owners in your company. When you are away from the office, you can use CallPilot with any tone dial telephone. When you are at the office, you can use CallPilot from any telephone connected to your company's CallPilot system.

Even outside callers who use a rotary dial telephone can use CallPilot. If a caller uses CallPilot from a rotary dial telephone, the system transfers the call to your company receptionist or the Operator. If the receptionist or Operator is not available to answer the call, the call transfers to the General Delivery Mailbox. Callers can leave messages that are the minimum message length that is configured for your system. The minimum message length can be between 0.5 to 3 seconds long. The maximum message length depends on your mailbox settings. Callers can leave messages that are greater in length than the minimum message length and up to the maximum message length that is configured for your system. Ask your System Administrator what your minimum and maximum message lengths are.

Never Full mailbox feature

The Never Full mailbox feature lets external callers leave a message in your mailbox, even if the mailbox is technically "full". The message is stored in your mailbox, but you cannot access it until you delete at least one existing message to allow space for the new message. If you attempt to listen to any new messages before deleting an existing message, you hear this voice announcement:

"Your mailbox is full. You must erase some messages before you can listen to new messages."

If your mailbox is full, you cannot leave a message in another mailbox, create a new message, copy, send, or reply to a message until you delete at least one existing message.

The Never Full mailbox feature is not available to internal callers. Internal callers cannot leave messages in mailboxes that are technically "full".

Playing your messages

Use the procedure for playing your messages that corresponds to the interface you use:

- [“To play your messages - Norstar Voice Mail” on page 48](#)
- [“To play your messages - CallPilot” on page 50](#)

To play your messages - Norstar Voice Mail

Use this procedure if you use the Norstar Voice Mail interface.

- 1 Press 9 8 1 .
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 Press **PLAY** or to listen to your messages.
For other options, see the table [“Playing your messages - Norstar Voice Mail” on page 48](#).
- 3 Press to end the session.

The table [“Playing your messages - Norstar Voice Mail”](#) shows the message options available to you during and after playing messages.

| Playing your messages - Norstar Voice Mail | | | | |
|--|-----------------|-------------------------|-------------------------|---|
| Option | Button | Available while playing | Available after playing | Description |
| Back up | or <<<< | ✓ | | Rewinds the message nine seconds and resumes playing it. |
| Copy | or COPY | ✓ | ✓ | Sends a copy of the message to one or more mailboxes. If you record an introduction, it must longer than three seconds. |
| End of Message | or >>>> | ✓ | | Goes to the end of the message. |
| Envelope | | ✓ | ✓ | Plays the information in the message envelope. Envelope information includes the date and time the message was sent and, if the message is internal, the directory name of the sender. |
| Erase | or ERASE | ✓ | ✓ | Deletes the message currently playing. If no messages are playing, deletes the last message played. Deleted messages remain in your mailbox until the session is ended. (Refer to Notes 1 and 2 on page 50 .) |

| Playing your messages - Norstar Voice Mail | | | | |
|--|---|-------------------------|-------------------------|--|
| Option | Button | Available while playing | Available after playing | Description |
| Skip forward | [3] or >>> | ✓ | | Advances the message nine seconds and continues playing from that point. A message can be forwarded as many times as required. |
| Next | [6] or [#] [#] | ✓ | ✓ | Plays the next message in the mailbox. If you use this while a message is playing, it stops playing the current message and plays the next message in your mailbox. |
| Pause/Continue | [2] or <u>STOP</u> / <u>PLAY</u> | ✓ | | Temporarily stops a message. When you stop the message, you can play the previous message, continue playing the current message, or skip to the next message. |
| Previous | [4] | ✓ | ✓ | Stops playing the current message and plays the previous message. |
| Quit | [*] | | ✓ | Stops playing the message and plays the Mailbox main menu options. |
| Replay | [1] [1] or <<< <<< | ✓ | | Replays the message from the beginning. |
| Replay | [1] | | ✓ | Replays the last message. |
| Reply | [9] or <u>REPLY</u> | ✓ | ✓ | Replies to a message. (Refer to Note 3 on page 50 .) The reply can be either: - a message to an internal sender's mailbox - a telephone call to an internal or external party (Refer to Note 4 on page 50 .) |
| Save Message | [7] [7] or <u>SAVE</u> | ✓ | | Saves the message being played. (If you do not delete a message, it is automatically saved.) This option is not shown on the display unless you erase a message. If you erase a message and try to play the message again, you can press <u>SAVE</u> on a two line display telephone. (Refer to Note 2 on page 50 .) |
| Volume Control | [*] | ✓ | | Adjusts the volume of the message that is playing. The volume increases each time you press [*]. After four presses, the volume returns to the lowest level. |

Notes:

- 1 Because your mailbox has limited message storage space, delete any messages you no longer need. After a certain time period, your saved messages are erased automatically. Ask your System Administrator about this.
- 2 You can retrieve a deleted message only if you have not quit the session in which you deleted it. For information about retrieving deleted messages see [“Retrieving erased messages” on page 52.](#)”
- 3 You can always use the Reply feature to reply to an internal caller. The Reply feature can be disabled by your System Administrator for external and network messages.
- 4 You can reply to an outside caller by dialing them back if your company subscribes to Caller ID (CLID) service. For further information about replying to an outside caller see [“Replying to an external caller” on page 68.](#)

To play your messages - CallPilot

- 1 Press .
Follow the voice prompts or the display button options to open your mailbox.

A voice prompt announces the number of new and saved messages that you have.

```

No messages
COMP  MBOX  EXIT
  
```

- 2 You can play any message that you want to listen to.
Press to play the current message.
For other message commands, see the table [“Playing your messages - CallPilot”](#).
- 3 Press to end the session.

The table [“Playing your messages - CallPilot”](#) shows the message options that are available to you during and after playing messages.

| Playing your messages - CallPilot | | | |
|-----------------------------------|----------------------------------|------------------------------------|--|
| Option | Button | Available during and after playing | Description |
| Skip Back | <input type="button" value="1"/> | | Rewinds the message five seconds and resumes playing it at that point. |
| Skip Forward | <input type="button" value="3"/> | | Advances the message five seconds and continues playing from that point. |
| Previous Message | <input type="button" value="4"/> | | Stops playing the current message and plays the previous message. |

| Playing your messages - CallPilot | | | |
|-----------------------------------|--------|------------------------------------|--|
| Option | Button | Available during and after playing | Description |
| Next Message | 6 | | Plays the next message in the skillset mailbox. If you use this while a message is playing, it stops playing the current message and plays the next message in your mailbox. |
| Call Sender | 9 | | Places a call to the sender of a message. |
| Help | * | ✓ | Offers a Help menu. |
| Reply | 7 1 | ✓ | Replies to a message. |
| Envelope | 7 2 | ✓ | Plays the information in the message envelope. Envelope information includes the date and time the message was sent and, if the message is internal, the directory name of the sender. |
| Forward Message | 7 3 | ✓ | Forwards the message to one or more mailboxes. You can record an introduction to the forwarded message. |
| Reply All | 7 4 | ✓ | Replies to a message and all other recipients of the message. (Refer to Note 3 on page 50.) |
| Delete | 7 6 | ✓ | Deletes the current message. Deleted messages remain in your mailbox until the session ends. (Refer to Notes 1 and 2 on page 50.) |

Retrieving erased messages

You can retrieve an erased message if you are still in the CallPilot session. An erased message remains in your mailbox until you end the current CallPilot session.

After you play your messages and exit CallPilot, any messages that you do not erase are saved. Since message storage space is limited, we recommend that you erase messages that you no longer need.

To retrieve an erased message - Norstar Voice Mail

After you erase a new or saved message, the number of new or saved messages shown on the display is decreased by one. Even though the display shows 0 new 0 saved, you can still play and retrieve your erased messages. Press **PLAY** or **2** to listen to your erased message, then press **7 7** to restore the message to your mailbox.

To retrieve an erased message - CallPilot

You can retrieve a deleted message. A deleted message remains in your mailbox until you end the current CallPilot session. Locate the deleted message. Press **7 6** to restore the message.

After you play your erased message, you can restore it. If you end the current session without restoring the erased message, it is permanently erased from CallPilot.

Screening your calls

With Call Screening you can determine who is calling before you accept the call. Call Screening applies only to external calls transferred from the Auto Attendant or from Custom Call Routing (CCR). See your System Administrator for information on CCR.

You can use Call Screening if:

- Caller ID (CLID) is not available
- Caller ID is not a reliable indication of the caller identity
- your telephone does not have display capabilities

If Call Screening is enabled, CallPilot asks the caller to record their name after the tone. (If the caller presses ***** when they are asked to record their name, the call goes back to the Auto Attendant.) The caller hears a hold tone while they wait. If you do not answer, the call transfers to your mailbox.

Since some callers do not like to record their name and wait for service, use this feature with discretion.

To use Call Screening

- 1 You receive an external call that is transferred from the Auto Attendant or from Custom Call Routing (CCR).
- 2 CallPilot announces the caller's name to you.
If the caller does not record their name, the voice prompt says, "Unknown caller."
- 3 You can answer the call or let the caller leave a message in your mailbox:
 - press **AHS** or **1** to answer the call
 - press **QUIT** or ***** to transfer the call to your mailbox.

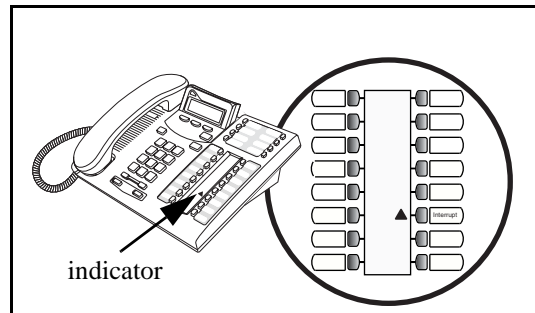
Interrupting a caller

With the Interrupt feature (**6 9 8 7**) you can intercept a caller who is listening to your mailbox greeting or leaving a message. You can program the Interrupt feature to a memory button with an indicator on your Nortel telephone. For more information about programming a feature to a memory button, see "[Programming a memory button with a feature code](#)" on page 32.

When you interrupt a caller who is leaving a message in your mailbox, any part of the message that was recorded remains in your mailbox. Remember to delete this message from your mailbox.

To interrupt a caller

- 1 While a caller is listening to your mailbox greeting or leaving a message, the indicator (**▷** or **▲**) flashes on your telephone.
- 2 Press the Interrupt button or press **6 9 8 7** to speak with the caller.



Note: The indicator flashes quickly if the caller is listening to your greeting

The indicator flashes slowly if the caller is leaving a message.

The flashing indicator is only present if one of the buttons next to the LCD display is programmed as the **6 987** key.

Chapter 7

Sending messages

This chapter describes how to send messages and explains:

- [Recording and sending messages](#)
- [Searching the Company Directory](#)
- [Assigning message delivery options](#)
- [Sending a message to more than one recipient](#)
- [Replying to messages](#)
- [Placing a call with Thru-Dial](#)

Recording and sending messages

The messages you record must be longer than three seconds. The system times out after five seconds of silence.

You can record and send messages using:

- the Open Mailbox feature
- the Leave Message feature

When you use the Open Mailbox feature, you open your personal mailbox and enter your password. Then you record your message and enter the mailbox number of the message recipient.

When you use the Leave Message feature, you enter the extension of the message recipient immediately. Then you record your message. You do not enter your password or open a mailbox.

When you record and send messages you can:

- search the Company Directory
see [“Searching the Company Directory” on page 59](#)
- assign message delivery options
see [“Message delivery options” on page 61](#)
- send a message to more than one recipient
see [“Sending a message to more than one recipient” on page 65](#)

Use the procedures that apply to your interface:

- [“To record and send a message using the Open Mailbox feature - Norstar Voice Mail” on page 56](#)
- [“To record and send a message using the Open Mailbox feature - CallPilot” on page 57](#)
- [“To record and send a message using the Leave Message feature - Norstar Voice Mail” on page 58](#)
- [“To record and send a message using the Leave Message feature - CallPilot” on page 58](#)

To record and send a message using the Open Mailbox feature - Norstar Voice Mail

```
0 new 0 saved
PLAY REC ADMIN
```

```
Record message
RETRY PAUSE OK
```

```
Accept rec?
RETRY PLAY OK
```

```
Mbox:
DIR QUIT
```

```
Smith, Pat
OPTS CC SEND
```

- 1 Press **[*]** **[9]** **[8]** **[1]** .
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 Press **REC** or **[3]** and record your message at the tone.
- 3 Record your message.

Press **PAUSE** or **[2]** to pause your message.
When you wish to resume recording, press **CONT** or **[2]** to continue recording your message.

Press **OK** or **[#]** to end your recording
or
press **RETRY** to erase and re-record your message.
- 4 Press **OK** or **[#]** to accept your message
or
press **PLAY** or **[1]** to listen to your message
or
press **RETRY** or **[2]** to erase and re-record your message.
- 5 Enter the mailbox number or the Group List number
or
press **DIR** or **[#]** to search the Company Directory.
- 6 Press **SEND** or **[#]** to send the message now with the Normal delivery option
or
press **CC** or **[4]** to send this message to more than one mailbox owner, with one set of delivery options applied to all recipients.
The display shows the name of the mailbox owner or Group, in this example, mailbox owner Pat Smith.
- 7 If you want to assign delivery options, see [“To assign message delivery options - Norstar Voice Mail”](#) on page 62
or
press **[*]** to end the session.

To record and send a message using the Open Mailbox feature - CallPilot

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or display options to open your mailbox.
- 2 Press **COMP** or **[7] [5]** to enter the Compose Message option.
- 3 Enter the mailbox number or Group List address and press **#**
or
press **NAME** or **[1] [1]** to search the Company Directory and go to step 5.
(The default to search the Company Directory is **[1] [1]**.
The System Administrator can change this number.)
- 4 Press **OK** or **#** to accept the address
or
press **RETRY** to enter a new mailbox address and go to step 3.
- 5 Press **DONE** or **#** when you are finished entering addresses.
- 6 Press **REC** or **[5]** and record your message at the tone.
- 7 Press **OK** or **#** to end your recording
or
press **REREC** to erase and re-record your message.
- 8 Press **PLAY** or **[2]** to listen to your message
or
press **SEND** or **[7] [9]** to send the message now with the Normal delivery option
or
press **DEL** or **[7] [6]** and press **[5]** to erase and re-record the message.
- 9 If you want to assign delivery options see [“To assign message delivery options - CallPilot” on page 64](#)
or
press **[*]** to end the session.

```
To:
NAME  SPEC  DONE
```

```
To: XXXX
RETRY          OK
```

```
To:
NAME  SPEC  DONE
```

```
EMPTY
REC
```

```
Recording....
REREC          OK
```

```
Rec stopped
PLAY  DEL  SEND
```

To record and send a message using the Leave Message feature - Norstar Voice Mail

- 1 Press **[*] 9 8 0**.
- Mbox
 DIR QUIT
- 2 Enter the mailbox number or Group List number. If you do not know the mailbox number, press **DIR** or **#** to use the Company Directory.
- Record message:
 RETRY PAUSE OK
- 3 When you hear the tone, record your message.
You can press **PAUSE** or **[2]** to stop your recording and press **CONT** or **[2]** to continue recording your message or press **RETRY** to erase and re-record your message.
- Record message:
 RETRY PAUSE OK
- 4 Press **OK** or **#** to end your recording.
- Message options:
 RETRY PLAY SEND
- 5 Press **SEND** or **#** or replace the handset to send the message using the Normal delivery option or press **PLAY** or **[1]** to listen to your message or press **RETRY** or **[2]** to erase and re-record your message or press **[3]** to change the delivery options.

To record and send a message using the Leave Message feature - CallPilot

- 1 Press **[*] 9 8 0**.
- To:
 NAME DONE
- 2 Enter the mailbox address or Group List address.
Press **NAME** or **[1] [1]** to use the Company Directory.
- To: XXXX
 RETRY OK
- 3 Press **OK** or **#** to accept the address.
Press **RETRY** to enter a new mailbox address.
- <xxxx>
- 4 Record your message at the tone.
- Recording....
 REREC OK
- 5 Press **OK** or **#** to end your recording or press **REREC** to erase and re-record your message.

Rec stopped
PLAY DEL SEND

- 6 Press PLAY or **2** to listen to your message
or
press SEND or **7 9** to send the message now with the
Normal delivery option
or
press DEL or **7 6** to erase and re-record your message.

Searching the Company Directory

If you know the name but not the mailbox number of someone you want to send a message to, you can search the Company Directory. You can find any initialized mailbox by searching the Company Directory. By default, you can press **1 1** to search the Company Directory, but the System Administrator can change the dialpad buttons.

If the Company Directory is not enabled:

- the DIR display option does not appear on the display
- you do not hear a the voice prompt that announces the dialpad buttons to press for the Company Directory

To search the Company Directory

1 Press .

2 Press **DIR** or to search the Company Directory.

Last name:

3 Use the dialpad buttons associated with the first three or four letters of the mailbox owner's name to locate and select the person's mailbox. Enter the last name, first name or both names depending on how your system is set up.

This display shows an example of a prompt for a mailbox owner's last name. For example, to enter the letters "Wayn" enter .

Wayne, Paul
RETRY NEXT

4 In this example, the name of the mailbox owner, Paul Wayne appears on the display and is announced. To accept the mailbox owner, press **OK** or or if you do not want the person who is shown, press **NEXT** or to see the next matching name.

Wayne, Paul


5 The greeting of the mailbox owner plays. If the mailbox owner you select does not have a Personal greeting recorded and selected, you hear their Company Directory recording.

Assigning message delivery options

Use the procedure for the interface you use:

- ["To assign message delivery options - Norstar Voice Mail" on page 62](#)
- ["To assign message delivery options - CallPilot" on page 64](#)

Message delivery options

| Option | Display button | Norstar Voice Mail dialpad button | CallPilot dialpad button | Description |
|---------------------------|-----------------------------------|---|--------------------------|--|
| Normal | <u>SEND</u> | #  | 7 9 | Sends a message with a Normal delivery option. |
| Certified/ Acknowledge | <u>CERT</u> or <u>ACK</u> | 1 | 5 | Sends you notification that your message has been received and played. |
| Urgent | <u>URGENT</u> or <u>URG</u> | 2 | 1 | Plays messages marked Urgent before other messages in the mailbox. Urgent messages are preceded by the voice prompt, "This message is urgent." |
| Other | <u>OTHR</u> | | | Accesses the Private and Timed delivery options. If <u>PRIV</u> or <u>ACK</u> appears instead of <u>OTHR</u> , the Timed delivery option is not available. |
| Private | <u>PRIV</u> | 3 | 4 | Private messages cannot be forwarded to another mailbox. |
| Timed | <u>TIME</u> or <u>TIMED</u> | 4 | 6 | Lets you assign a delivery time to the message. |

The Certified/Acknowledge and Timed delivery options are available only if you call from a telephone that has a mailbox associated with it. Messages sent with the Timed delivery option are delivered at the time that you specify.

If you use the Timed delivery option, you first enter the time, including a.m. or p.m. You are then prompted to accept or change the date, which defaults to today or tomorrow, and you can accept the date that corresponds to the next occurrence of the specified time. Dates are shown by month and day, and the year is inferred. If the month and day are earlier than the current date, the next year is assumed. When the specified time and date occurs, the message is sent. You cannot cancel the message prior to delivery.

To assign message delivery options - Norstar Voice Mail

- Record your message using
[“To record and send a message using the Open Mailbox feature - Norstar Voice Mail” on page 56](#)
 or
[“To record and send a message using the Leave Message feature - Norstar Voice Mail” on page 58.](#)

```
wayne, Pat
OPTS  CC  SEND
```

- Press **OPTS** for delivery options.

```
Delivery options
CERT  URGENT  OTHR
```

- Press **CERT** for Certified delivery and go to step 9
 or
 press **URGENT** for Urgent delivery and go to step 9
 or
 press **OTHR** for Timed or Private delivery and go to step 4.
 If **PRIV** appears on the third display button, the Timed delivery option is not available.

If you are using a one line display phone, press **3** for Private delivery or press **4** for Timed delivery.

```
Delivery options
PRIV  TIME
```

- Press **PRIV** or **3** to send a message with a Private delivery option and go to step 9
 or
 press **TIME** or **4** to set up a delivery time for the message.

```
Time hh:mm
RETRY
```

- Enter the time that you want to send a message using the Timed delivery option.
 This is a four-digit field. Any single-digit hour or minute must be preceded by a zero. For example, enter 0800 for eight o'clock.

```
hh:mm
RETRY  AM  PM
```

- Press **AM** or **1**
 or
PM or **2**.

```
hh:mm am/pm
RETRY  OK
```

- Press **OK** or **#** to accept the time you entered or press **RETRY** or ***** to change the time.

```
Tu mm dd
CHNG  NXTDAY  OK
```

- Press **CHNG** or **1** to change the date shown to a different date.
 Press **NXTDAY** to change the date to the next day (the day after the date that is shown).
 Press **OK** or **#** to accept the date shown, which defaults to today or tomorrow, and select the one that corresponds to the next occurrence of the specified time.

```
Wayne, Pat
OPTS  CC  SEND
```

- 9** Press **SEND** or **#** to send the message now
or
press ***** to cancel all delivery options.

```
0 new 8 saved
PLAY  REC  ADMIN
```

- 10** Press **⏪** to end the session.

For more information about the message delivery see [“Message delivery options”](#) on page 61.

To assign message delivery options - CallPilot

- 1 Record your message using
[“To record and send a message using the Open Mailbox feature - CallPilot” on page 57](#)
 or
[“To record and send a message using the Leave Message feature - CallPilot” on page 58.](#)

- 2 Press **7** **0** for message options.
 This is a voice prompt option and does not appear as a display button option.

```
Msg options
URG  PRIV  OTHR
```

- 3 Press **URG** or **1** for Urgent delivery and go to step 9
 or
 press **PRIV** or **4** for Private delivery and go to step 9
 or
 press **OTHR** for Acknowledged or Timed delivery and go to step 4. If **ACK** appears on the third display button, the Timed delivery option is not available.

If you are using a one line display phone, press **5** for Private delivery or press **6** for Timed delivery.

```
Msg options
ACK      TIME
```

- 4 Press **ACK** or **5** to send a message with a Private delivery option and go to step 9
 or
 press **TIME** or **6** to set up a delivery time for the message.

```
Time hh:mm
RETRY
```

- 5 Enter the time that you want to send a message using the Timed delivery option.
 This is a four-digit field. Any single-digit hour or minute must be preceded by a zero. For example, enter 0800 for eight o'clock.

```
hh:mm
RETRY  AM  PM
```

- 6 Press **AM** or **1**
 or
 Press **PM** or **2**.

```
hh:mm am/pm
RETRY      OK
```

- 7 Press **OK** or **#** to accept the time you entered or press **RETRY** or ***** to change the time.

```
Tu mm dd
CHNG  NXTDAY  OK
```

- 8 Press **CHNG** or **1** to change the date shown to a different date.
Press **NXTDAY** to change the date to the next day (the day after the date that is shown).
Press **OK** or **#** to accept the date shown, which defaults to today or tomorrow, and select the one that corresponds to the next occurrence of the specified time.
- 9 Press **7 9** to send this message now
or
press **7 0** to cancel all delivery options.
- 10 Press **[End Call]** to end the session.

Sending a message to more than one recipient

Sending a message to a Group List

A Group List is a list of mailbox owners. If you have a group of people that you frequently send messages to, you can send the message to a Group List. When you send a message to a Group List, each mailbox owner in the Group List receives the same message. If you are a member of the group you are addressing, you do not receive a copy of the message.

If you need a Group List, ask your System Administrator to create one for you. Tell the System Administrator:

- the mailbox owners' names
- a list of the mailbox numbers
- the Group List name

Your System Administrator can publish a list of the mailboxes in each Group List.

If you know the number of the Group List:

- and you use the Norstar Voice Mail interface, you can enter the Group List number instead of a mailbox number at the **Mbox:** prompt
- and you use the CallPilot interface, you can enter the Group List number instead of a mailbox number at the **To:** prompt

If you know the name of the Group List:

- and you use the Norstar Voice Mail interface, enter the name of the Group List in the Company Directory at the **DIR** prompt
- and you use the CallPilot interface, enter the name of the Group List in the Company Directory at the **NAME** prompt

Forwarding a copy of a message to one or more recipients

You can forward a copy of a message during or after playing the message. When you forward a copy of a message to a mailbox, you can record an introduction to the message. If you use the Norstar Voice Mail interface, your introduction must be at least three seconds long.

After you record an introduction to the message and enter the mailbox number, your introduction and a copy of the message are automatically sent to the mailbox you selected. You can then send an additional copy of the introduction and the message to another mailbox, or quit and return to the Listen to Messages menu. You can forward copies to as many mailboxes as you like.



Note: You cannot forward Private messages.

For more information on forwarding your messages, see [“Norstar Voice Mail mailbox options” on page 33](#) and [“CallPilot mailbox options” on page 35](#).

Replying to messages

You can reply to internal and external callers. You can reply to a message from an external caller if your company subscribes to CLID.

Use the procedure for replying to messages that applies to the interface you use:

- [“To reply to an internal caller - Norstar Voice Mail” on page 67](#)
- [“To reply to an internal caller - CallPilot” on page 67](#)

Replying to an internal caller

| If you use | and you want to | press |
|--------------------|---|---|
| Norstar Voice Mail | reply to the caller's extension | <u>CALL</u> to transfer to the internal caller's extension. |
| | leave a message in the caller's mailbox | <u>MSG</u> to record and send a reply to the internal caller's mailbox. |
| CallPilot | reply to the caller's extension | <u>Call Sender</u> 9 to transfer to the internal caller's extension. |
| | leave a message in the caller's mailbox | <u>Reply</u> 7 1 to record and send a reply to the internal caller's mailbox. |

To reply to an internal caller - Norstar Voice Mail

- 1 Press **9** **8** **1**.
Follow the voice prompts or the display button options to open your mailbox.

```
1 new 0 saved
PLAY REC ADMIN
```

- 2 Press PLAY or **2**.

```
End of message
REPLY ERASE NEXT
```

- 3 After you listen to the message, press REPLY or **9**.

```
Reply to msg
MSG CALL QUIT
```

- 4 Press CALL or **2** to call the caller
or
press MSG or **1** to record and send a reply.

To reply to an internal caller - CallPilot

- 1 Press **9** **8** **1**
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 A mailbox summary is announced.
While you are in your message list, you can play any message.

- 3 Press **2** to play the current message.
- 4 Press **9** to call the caller
or
press **7** **1** to record and send a reply.

Replying to an external caller

You can reply to a message from an external caller if your company subscribes to CLID. Before using the Reply option you must play the message. To use the Reply feature, it must be set up for your telephone. If you cannot use the Reply feature, contact your System Administrator.

Use the procedure that applies to the interface you use:

- [“To reply to an external caller - Norstar Voice Mail” on page 68](#)
- [“To reply to an external caller - CallPilot” on page 68](#)

To reply to an external caller - Norstar Voice Mail

- 1 Press **6** **9** **8** **1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 Press **PLAY** or **2**.
- 3 After you listen to the message, press **REPLY** or **9**.
CallPilot dials the external number directly.

```
1 new 0 saved
PLAY REC ADMIN
```

```
End of message
REPLY ERASE NEXT
```

To reply to an external caller - CallPilot

- 1 Press **6** **9** **8** **1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 A mailbox summary is announced.
While you are in the message list you can play any message.
- 3 Press **2** to play the current message.
- 4 Press **9** to call the caller.
CallPilot dials the external number directly.

Placing a call with Thru-Dial

With Thru-Dial you can call another number while you are logged on to your mailbox, or if you call someone's extension and reach their voicemail.



Note: The System Administrator can restrict the numbers that you can dial, so ask your System Administrator if you can use Thru-Dial.

Thru-Dial can only be used to call internal numbers.

When to use Thru-Dial

When you are making a call, you can make a second call without hanging up and dialing a second number by using Thru-Dial. This is especially useful if you are at a pay phone.

Use Thru-Dial if you want callers to be able to dial another number to reach your Target Attendant, (which you can change to be an out-of-office number) or maybe another contact person if you're not available.

When you are making calls from a hotel you can avoid toll charges by using Thru-Dial to call other extensions from one call.

Examples of using Thru-Dial

- Pat calls her mailbox from a pay phone and hears an urgent message from Joe. Without hanging up, Pat can Thru-Dial Joe's number and doesn't have to pay for another call.
- Pat is away from the office and needs to leave messages for Jill and Bob in the office. Pat can call Jill's mailbox, leave a message, then Thru-Dial to Bob and leave a message.
- Pat calls Doris and gets her voicemail. Pat knows that Andy can provide the information she needs, so Pat Thru-Dials to Andy from Doris' mailbox.

To place a Thru-Dial call

- 1 Open your mailbox:
 - If you are calling remotely press ***** ***** during your greeting to open your mailbox. If you are in Europe or Australia press **8** **8**. Follow the voice prompts to enter your mailbox number and password.
 - If you are calling from your Nortel phone, press **☎** **9** **8** **1**. Follow the voice prompts or the display buttons to open your mailbox.
- 2 Press **0**, followed immediately by the extension number you want to call. Do not pause for more than two seconds while you are entering the number.

To search the Company Directory while placing a Thru-Dial call

If you enter a name instead of a number with Thru-Dial, CallPilot places the call as soon as it finds a match for the name.

1 Open your mailbox:

- If you are calling remotely press *** * *** during your greeting to open your mailbox. If you are in Europe or Australia press **8 8**. Follow the voice prompts to enter your mailbox number and password.
- If you are calling from your Nortel phone, press **☎ 9 8 1**. Follow the voice prompts or the display buttons to open your mailbox.

2 If you use the CallPilot interface:

Press **0**, followed immediately by **1 1** to search the Company Directory. This is the default Company Directory number. The System Administrator can change the Company Directory number. If you don't know the number, press *****.

If you use the Norstar Voice Mail interface:

Press **0**, followed immediately by **#** to search the Company Directory.

3 Enter the last name, then the first, until your call is placed.

For instructions on entering the name, see [“Searching the Company Directory” on page 59](#).

To use Thru-Dial to reach your Target Attendant

Your Target Attendant is the number of the person your callers reach when they press zero.

1 Open your mailbox:

- If you are calling remotely press *** * *** during your greeting to open your mailbox. If you are in Europe or Australia press **8 8**. Follow the voice prompts to enter your mailbox number and password.
- If you are calling from your Nortel phone, press **☎ 9 8 1**. Follow the voice prompts or the display buttons to open your mailbox.

2 Press **0**, then wait for the call to be answered by your Target Attendant.

For information on setting up a Target Attendant see [“Assigning a Target Attendant” on page 27](#).

Chapter 8

Call Forwarding your calls

You can call forward your calls if you want your calls to go to CallPilot immediately, without ringing at your extension. For example, you can set up Call Forwarding if you are not going to be in the office and you do not want your ringing phone to disturb your colleagues, or if you do not want to take calls while you are working. While Call Forward is on, callers can leave a message for you without having to wait for the phone to ring several times.

This chapter explains the following ways you can forward your calls:

- [Call Forwarding your calls to your mailbox](#)
- [Setting up Call Forward remotely](#)
- [Call Forward with Caller ID](#)

Call Forwarding your calls to your mailbox

To forward incoming calls to your mailbox, press **[*] 9 [8] 4**.

To cancel Call Forward, do one of the following:

- press **[*] 9 [8] 4** again
- press **[Call Fwd.]**
- press **[*] # 4**
- press **CANCEL**

Setting up Call Forward remotely

When you are away from the office you can forward your calls to your mailbox by using the dialpad of any tone dial telephone.



Note: You can set up Call Forward remotely only if you use the Norstar Voice Mail interface. You cannot set up Call Forward remotely if you use the CallPilot interface.

To set up Call Forward remotely

- 1 Call the Automated Attendant or your business telephone from any tone dial telephone.
 - 2 While the greeting plays enter the CallPilot extension number or press **[*] [*]**
If you are in Europe or Australia enter the CallPilot extension number or press **[8] [8]**.
 - 3 Follow the voice prompts to open your mailbox.
 - 4 Press **[8] [2]**.
 - 5 Press **[3]** to open the Call Forward menu.
-

- 6 Press **1** to turn Call Forward on or off.
 - If Call Forward is on, the voice prompt says *“Calls will be answered immediately.”*
All calls to your telephone are now answered by CallPilot.
 - If Call Forward is off, the voice prompt says *“Calls will ring at your set.”*
- 7 Press **1** to turn Call Display on or off.
 - If Call Display is on, the voice prompt says *“Caller information will be displayed at your set.”*
 - If Call Display is off, the voice prompt says *“Caller information will not be displayed.”*
- 8 Replace the handset to end the session.

Call Forward with Caller ID

The Call Forward with Caller ID (CLID) feature is available only if your company subscribes to a CLID service. If you are not sure whether your company subscribes to a CLID service, ask your System Administrator. CLID does not appear if the caller has a private or unknown telephone number.

You can set up Call Forward with CLID to screen calls forwarded to your mailbox. If the feature is enabled, you hear an Alert tone and the CLID information appears on the telephone display.

To talk to a caller who is forwarded to your mailbox, press **6** **9** **8** **7** to interrupt the call.

To turn Call Forward with CLID on or off

- 1 Press .
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 Press ADMIN or .
Press GREET or .
- 3 Press CFWD or .
- 4 Press YES or to have your calls go to CallPilot without ringing at your phone
or
press NO or to have calls ring at your set.
- 5 Press CHNG or to turn Call Display on or off.
- 6 Press to end the session.

```
Greeting options:
REC  CHOOSE  CFWD
```

```
Forward calls?
YES    NO
```

```
Display caller:Y
CHNG          QUIT
```

Call Forward on Busy overrides CLID

If your display telephone is assigned Call Forward on Busy, CLID information does not appear on the display. Call Forward on Busy is a feature that forwards your calls to another designated telephone or extension if your telephone is busy. Call Forward on Busy is assigned by the System Administrator.

Chapter 9

Transferring calls

This chapter describes transferring calls and explains:

- [Transferring calls to a CallPilot mailbox](#)
- [Transferring a mailbox owner's call to their mailbox](#)
- [Transferring a call to Custom Call Routing \(CCR\)](#)
- [About Outbound Transfer](#)
- [Setting up Outbound Transfer](#)
- [Adding special characters to a destination number](#)
- [Turning Outbound Transfer on or off](#)
- [Optimizing Outbound Transfer](#)

Transferring calls to a CallPilot mailbox

With the Transfer feature **[Transfer] [9] [8] [6]** you can transfer a call from your business telephone directly to a mailbox on the CallPilot system.

Transferring calls to a CallPilot mailbox has these advantages:

- If you transfer a call to a mailbox instead of another telephone, the call does not come back to you. If you transfer a call to another telephone and the call is not answered, the call comes back to you.
- The call is immediately transferred to the mailbox, which saves time.

[Transfer] [9] [8] [6] is not available on the Companion Wireless telephone.

To transfer a call to a mailbox from your telephone

- 1** Press **[Transfer] [9] [8] [6]**.
Do not press Hold because the call is put on hold automatically.
- 2** Enter the mailbox number or search the Company Directory. To search the Company Directory press the **[DIR]** display option.
- 3** Wait until the display shows **Call transferred** before you attempt any other CallPilot functions. The call automatically transfers and the CallPilot session ends.

Transferring a mailbox owner's call to their mailbox

You can transfer a mailbox owner's call to their CallPilot mailbox so that they can change their greetings or retrieve their messages.

To transfer a mailbox owner's call to their mailbox

- 1 Press **[☎] [9] [8] [6]**.
Do not press Hold because the call is put on hold automatically.
- 2 Enter the mailbox owner's mailbox number.
- 3 Wait until the display shows **Call transferred** before you attempt any other telephone features.



Note: Do not use **[☎] [7] [0]** to transfer a mailbox owner's call. This feature transfers the call to their telephone and it is possible that the call can return to you.

[☎] [9] [8] [6] is not available on a Companion Wireless telephone.

- 4 After a mailbox owner's call transfers to their mailbox, the mailbox owner must:
 - a Press **[*] [*]** while their mailbox greeting plays.
 - b Follow the voice prompts to open their mailbox.

Transferring a call to Custom Call Routing (CCR)

CCR is a single-digit application that provides callers with a more sophisticated menu and a wider range of options than the Automated Attendant.

Callers can use CCR to:

- listen to the Home menu and make a selection
- listen to a pre-recorded CCR Information message
- leave a message in a mailbox
- transfer to another extension or an external number

For more information about CCR, ask your System Administrator.

You can transfer a call to the beginning of a CCR Tree.

To transfer a call to a CCR Tree

- 1 Press **[☎] [9] [8] [6]**.
Do not press Hold **[☎]** because the call is put on hold automatically.
- 2 Choose a CCR Tree by entering a digit from 1 to 8 and pressing **[#]**.
- 3 Wait until the display shows **Call transferred** before you attempt any other features.

About Outbound Transfer

You can set up Outbound Transfer to transfer a caller who reaches your mailbox to a number that you assign. A caller can use Outbound Transfer from any tone dial telephone, and you can direct your Outbound Transfer calls to any telephone.

You can tell callers about this feature in your personal greeting. If you inform callers of this feature in your mailbox greeting, you must tell them what number to press to transfer:

- If you use the Norstar Voice Mail interface, tell callers to press **7**
- If you use the CallPilot interface, tell callers to press **9**

For example:

*“Hi. This is Brenda Whately. I’m away from the office today. Please leave me a message after the tone and I will return your call as soon as possible. If you need to reach me before tomorrow, press **7** and you will be transferred to my cell phone. Thanks.”*



Note: The restrictions that apply to your telephone line also apply to Outbound Transfer numbers. For example, if you cannot dial long distance telephone numbers from your telephone, you cannot have a long distance Outbound Transfer destination. If your mailbox is restricted to extension destinations for Outbound Transfer, see your System Administrator.

For Outbound Transfer to function properly, you must have a greeting recorded.

When you set up Outbound Transfer, you can add special characters to the destination number. Refer to [“Adding special characters to a destination number” on page 77](#) for more information.

Adding special characters to a destination number

Special characters are pauses or other dialing instructions that you can add if they are required to access the network or a destination number.

Follow the voice prompts or press **ADD** to add special characters to a destination telephone number (or a destination pager number if you are setting up a destination pager number in Off-premise Message Notification.) A destination telephone or pager number cannot be longer than 30 characters.



Note: If you are adding special characters, do not press the dialpad buttons **#** to enter a #, or ***** to enter a *. Press the button directly below the option on a two line display telephone, or listen to the voice prompts.

| Adding special characters to a destination number | |
|---|--|
| Press | Description |
| 2 or DIGS | to resume adding digits to the destination phone number |
| 3 or PAUS | to enter a timed pause that appears as P on the display. Pauses are four seconds long. |

| Adding special characters to a destination number | |
|--|--|
| Press | Description |
| 4 or TONE | to recognize dial tone (behind PBX). The Recognize Dial Tone special character appears as D on the display. |
| 5 or QTHR # | to enter a # |
| 6 or QTHR * | to enter a * |
| * | to cancel and retry |

Setting up Outbound Transfer

To set up Outbound Transfer to a phone number

- 1 Press **[*] 9 [8] 1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[8] [0]** to open the Mailbox Options
 - Press **[9]** to open the Outbound Transfer menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[8]** to open the Outbound Transfer menu
- Go to step 3

```
Outbound xfr
ADMIN SELECT
```

```
Destination:
PHONE EXT
```

```
Ph:
RETRY      OK
```

```
<x>
ADD        OK
```

```
Transfer: off
CHNG      QUIT
```

```
Transfer: on
CHNG      QUIT
```

- 3 Press **ADMIN** or **[1]** to set up Outbound Transfer or if you have previously set up Outbound Transfer press **CHNG**.
- 4 Press **PHONE** to select an external phone as the destination.
- 5 Enter the destination phone number and press **OK** or **[#]**.
- 6 Press **OK** or **[#]** to accept the destination number, represented by <x> or press **ADD** or **[2]** to add special characters. For information, see [“Adding special characters to a destination number” on page 77](#). After you add special characters, press **OK** or **[#]** to accept the destination number.
- 7 Press **CHNG** or **[1]** to turn Outbound Transfer on.
- 8 Press **QUIT** or **[*]**.
- 9 Press **[*]** to end the session.

To set up Outbound Transfer to an extension

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[8] 0** to open the Mailbox Options
 - Press **[9]** to open the Outbound Transfer menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[8]** to open the Outbound Transfer menu
- Go to step 3

- 3 Press **ADMIN** or **[1]** to set up Outbound Transfer.

- 4 Enter the destination extension and press **OK** or **[#]**.

- 5 Press **OK** or **[#]** to accept the number.
The <x> represents the extension.

- 6 Press **CHNG** or **[1]** to turn Outbound Transfer on.

- 7 Press **QUIT** or **[*]**.

- 8 Press **[hook]** to end the session.

```
Outbound xfr
ADMIN      SELECT
```

```
Ext:
RETRY      OK
```

```
Accept<x>
RETRY      OK
```

```
Transfer: off
CHNG       QUIT
```

```
Transfer: on
CHNG       QUIT
```

Turning Outbound Transfer on or off

You can turn Outbound Transfer on or off at any time after you set it up. Turning Outbound Transfer off does not affect any of its assigned parameters.

To turn Outbound Transfer on or off

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [0]** to open the Mailbox Options
- Press **[9]**
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[8]** to open the Outbound Transfer menu
- Go to step 3

- 3 Press **SELECT** or **[2]** to access Outbound Transfer.

- 4 Press **CHNG** or **[1]** to turn Outbound Transfer on.
Press **CHNG** again to turn Outbound Transfer off.

- 5 Press **QUIT** or **[*]**.

- 6 Press **[END]** to end the session.

```
Outbound xfr
ADMIN      SELECT
```

```
Transfer: off
CHNG      QUIT
```

```
Transfer: on
CHNG      QUIT
```

Optimizing Outbound Transfer

When CallPilot transfers a call to an external telephone number using Outbound Transfer, two lines are used. An incoming line connects a caller to a mailbox and an outgoing line transfers a caller to an Outbound Transfer telephone number. Both lines remain in use while the caller connects to the Outbound Transfer telephone number.

To optimize the use of CallPilot lines, the Outbound Transfer call to an external telephone number can transfer to the incoming line to make the outgoing call. This type of transfer is called a Link transfer.



Note: You can perform a Link transfer only if the CallPilot line is equipped with Link transfer capability. The most common type of line that supports Link transfer is a Centrex line. If Link transfer is programmed for an Outbound Transfer and your CallPilot lines do not support this feature, the caller is disconnected. Ask your System Administrator before programming a Link transfer.

To perform a Link transfer with Outbound Transfer you must add before the Outbound Transfer telephone number.

For example, the telephone number looks like:

where:

- instructs CallPilot to use the incoming line to perform the transfer
- is the telephone number dialed

Programming Outbound Transfer when CallPilot is behind a PBX

If you have CallPilot installed behind a PBX and you want to access an outside line and recognize dial tone, enter:

where:

- accesses an outside line
- specifies the next digits are special characters
- recognizes dial tone
- specifies that the next digits are the numbers to be dialed
- is the telephone number dialed

After you enter this dialing sequence, the display shows:

Chapter 10

Off-premise Message Notification

This chapter describes how to set up and change Off-premise Message Notification and explains:

- [About Off-premise Message Notification](#)
- [Setting up Off-premise Message Notification](#)
- [Changing Off-premise Message Notification](#)
- [Deleting a destination number](#)
- [Adding a destination number](#)
- [Turning Off-premise Message Notification on or off](#)

About Off-premise Message Notification

You can program CallPilot to call you at a phone number, an extension, or a pager when you have a message. Your System Administrator enables Off-premise Message Notification.

If you program CallPilot to call you at a phone, you are prompted to enter your password before you can listen to your messages.

You can receive notification of a message at a maximum of five different destination numbers. When the number of retry attempts is reached for each destination number, the next number in the series is called. For example, CallPilot can contact your car phone number first to let you know you have a message. If there is no answer, the call rings at your home number. If there is still no answer, the call rings at your pager number, and so on. The number of retry attempts is assigned by your System Administrator.

If the destination type is a telephone or extension, you must assign start and stop times. The start and stop times apply to all five notification numbers. You do not assign start and stop times if the destination is a pager.

Off-premise Message Notification begins at the start time. Set the start time for the time you are at the destination phone number, so you are there to receive your calls.

A person who receives an Off-premise Message Notification call can cancel Off-premise Message Notification to their destination number. This is useful if a destination is incorrectly programmed and the wrong person receives the calls.

The recipient of an Off-premise Message Notification call hears the following voice prompt: *“Message for (name of mailbox owner). To log on press [1]. If you have received this call by mistake, please press [2].”*

Off-premise Message Notification parameters

You can set up the parameters for Off-premise Message Notification from any tone dial phone.

The parameters are:

- destination type (phone, extension or pager)
- destination number (phone, extension or pager)
- time range for receiving calls at phone numbers or extensions. Pagers are notified any time there is a qualifying message.
- types of message you want to receive (all new messages or just urgent messages)



Note: The restrictions that apply to your phone line also apply to Off-premise Message Notification numbers. For example, if you cannot dial long distance phone numbers from your phone, you cannot have a long distance Off-premise Message Notification destination number.

Setting up Off-premise Message Notification

Follow these instructions if you are setting up Off-premise Message Notification for the first time. If you have already set up Off-premise Message Notification, see the section [“Changing Off-premise Message Notification” on page 93](#).

| To set up Off-premise Message Notification to | see |
|---|-------------------------|
| a phone number | page 84 |
| an extension | page 87 |
| a pager | page 89 |

To set up Off-premise Message Notification to a phone number

- 1 Press .
Follow the voice prompts or the display button options to open your mailbox.

2 If you use the CallPilot interface:

- Press **8** **5** to open the Mailbox Tools
- Press **NOTIF** or **2** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN SELECT
```

3 Press **ADMIN** or **1** to set up Off-premise Message Notification.

```
Destination:
PHONE EXT PAGER
```

4 Press **PHONE** or **1** to choose a phone number destination.

```
Ph:
RETRY OK
```

5 Enter the destination phone number and press **OK** or **#**. The destination phone number is a maximum of 30 digits.

```
<x>
ADD OK
```

6 Press **OK** or **#** to accept the destination phone number represented by <x>

or

press **ADD** or **2** to add special characters and use your dialpad or follow the voice prompts to add characters.See [“Adding special characters to a destination number” on page 77](#).After you add special characters, press **OK** or **#** to accept the destination number.

```
Start hhmm:
RETRY OK
```

7 Enter the start time for Off-premise Message Notification. This is a four-digit field. You must precede a single-digit hour and minute with a zero.

```
<start time>
RETRY AM PM
```

8 Press **AM** or **1**
or
Press **PM** or **2**.

```
<start time>
RETRY OK
```

9 Press **OK** or **#** to accept the start time.

```
Stop h:mm:
RETRY      OK
```

- 10** Enter the time when Off-premise Message Notification is to stop. This is a four-digit field. You must precede a single-digit hour and minute with a zero.

```
<stop time>
RETRY      AM      PM
```

- 11** Press AM or 1
or
Press PM or 2.

```
<stop time>
RETRY      OK
```

- 12** Press OK or # to accept the stop time.

```
More dest?
YES      NO
```

- 13** Press YES or 1 if you want to set up another destination number
or
press NO or # if you do not want to set up another destination number.

```
Start:<start time>
CHNG      NEXT
```

- 14** Press NEXT or # to accept the start time that you entered
or
press CHNG or 1 to change the start time.


```
Stop:<stop time>
CHNG      NEXT
```

- 15** Press NEXT or # to accept the stop time that you entered
or
press CHNG or 1 to change the stop time.

```
Ms9 type: new
CHNG      OK
```

- 16** Press OK or # if you want to be notified when you receive a new message
or
press CHNG or 1 if you want to be notified only when you receive an urgent message.

```
Ms9 notify
ADMIN    SELECT
```

- 17** Press  to end the session.

To set up Off-premise Message Notification to an extension

- 1 Press **☛ 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **8 5** to open the Mailbox Tools
 - Press **NOTIF** or **2** to open the Off-premise Message Notification menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN      SELECT
```

```
Destination:
PHONE EXT  PAGER
```

```
Ext:
RETRY      OK
```

```
Accept:<x>
RETRY      OK
```

```
Start hhmm:
RETRY      OK
```

```
<start time>
RETRY      AM      PM
```

```
<start time>
RETRY      OK
```

```
Stop hhmm:
RETRY      OK
```

- 3 Press **ADMIN** or **1** to set up Off-premise Message Notification.
- 4 Press **EXT** or **2** to choose an extension as the destination.
- 5 Enter the destination number and press **OK** or **#**.
- 6 Press **OK** or **#** to accept the destination extension.
The **<x>** represents the extension.
- 7 Enter the start time for Off-premise Message Notification.
This is a four-digit field. Any single-digit hour and minute must be preceded by zero.
- 8 Press **AM** or **1**
or
Press **PM** or **2**.
- 9 Press **OK** or **#** to accept the start time.
- 10 Enter the time when Off-premise Message Notification is to stop. This is a four-digit field. You must precede a single-digit hour and minute with a zero.

<stop time>
RETRY AM PM

- 11** Press AM or 1
or
Press PM or 2.

<stop time>
RETRY OK

- 12** Press OK or # to accept the stop time.

More dest?
YES NO

- 13** Press YES or 1 if you want to set up another destination number
or
press NO or # if you do not want to set up another destination number.

Start:<start time>
CHNG NEXT

- 14** Press NEXT or # to accept the start time that you entered
or
press CHNG or 1 to change the start time.

 
Stop:<stop time>
CHNG NEXT

- 15** Press NEXT or # to accept the stop time that you entered
or
press CHNG or 1 to change the stop time.

Msg type: new
CHNG OK

- 16** Press OK or # if you want to be notified when you receive a new message
or
press CHNG or 1 if you want to be notified only when you receive an urgent message.

Msg notify
ADMIN SELECT

- 17** Press  to end the session.

Setting up Off-premise Message Notification to a pager number

Example of a destination pager number

If you are assigning a pager destination number from behind a PBX, remember to insert a **9** (depending on your system) before the **#** to access an outside line.

There is a combined limit of 30 characters for the pager phone number and the pager message.

For example, to reach your pager, enter:

4 2 5 5 5 1 2 3 4 # 3

where:

- **#** specifies the next digits are special characters
- **4** recognizes dial tone
- **2** specifies that the next digits are the numbers to be dialed
- **5 5 5 1 2 3 4** is the pager phone number dialed
- **3** inserts a timed pause

Depending on the company supplying your paging service, the programming sequence can vary. For more information about setting the destination phone number parameters for your pager, contact your pager company.

To set up Off-premise Message Notification to a pager

- 1 Press **☛ 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:
 - Press **8 5** to open the Mailbox Tools
 - Press **NOTIF** or **2** to open the Off-premise Message Notification menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **1** to set up Off-premise Message Notification.

Destination:
PHONE EXT PAGER

4 Press PAGER or 3 to select a pager number destination.

Pager:
RETRY OK

5 Enter the destination pager number and press OK or #.

<x>
ADD OK

6 Press OK or # to accept the destination pager number represented by <x>
or
press ADD or 2 to add special characters and use your dialpad or follow the voice prompts to add characters. See [“Adding special characters to a destination number” on page 77](#).
After you add special characters, press OK or #.

Show:<xxxx>
CHNG NEXT

7 Press NEXT or # to accept the default pager message represented by <xxxx>. The default pager message that CallPilot sends is the CallPilot extension. This is the sequence of digits that is sent after the pager service is dialed, to notify you of who is paging you
or
press CHNG or 1 to change the pager message.
The combined limit is 30 characters for the pager phone number and the pager message.

More dest?
YES NO

8 Press YES or 1 if you want to set up another destination number
or
press NO or # if you do not want to set up another destination number.

Ms9 type: new
CHNG OK

9 Press OK or # to be notified when you receive a new message
or
press CHNG or 1 to change the message type to be notified only when you receive an urgent message.

Ms9 notify
ADMIN SELECT

10 Press END to end the session.

To set up Off-premise Message Notification to more than one destination

You can receive notification of a message at a maximum of five different destination numbers. The following steps show you how to enter a phone number destination and then add a pager destination for the first time.

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.
- 2 If you use the CallPilot interface:
 - Press **[8] [5]** to open the Mailbox Tools
 - Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
 - Press **[6]** to open the Off-premise Message Notification menu
 - Go to step 3
- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Ms9 notify
ADMIN SELECT
```

```
Destination:
PHONE EXT PAGER
```

```
Ph:
RETRY OK
```

```
<x>
ADD OK
```

```
Start: hhmm:
RETRY OK
```

- 4 Press **PHONE** or **[1]** to choose a destination phone number.
- 5 Enter the destination phone number and press **OK** or **[#]**.
The destination phone number cannot be longer than 30 digits.
- 6 Press **OK** or **[#]** to accept the destination phone number, represented by <x>
or
press **ADD** or **[2]** to add special characters and use your dialpad or follow the voice prompts to add characters. See [“Adding special characters to a destination number” on page 77](#).
- 7 Enter the start time for Off-premise Message Notification. This is a four-digit field. You must precede a single-digit hour and minute with a zero.

```
<start time>
RETRY AM PM
```

```
<start time>
RETRY OK
```

```
Stop hhmm:
RETRY OK
```

```
<stop time>
RETRY AM PM
```

```
<stop time>
RETRY OK
```

```
More dest?
YES NO
```

```
Notify2: none
SETUP NEXT
```

```
Destination:
PHONE EXT PAGER
```

```
Pager:
RETRY OK
```

```
<xxxx>
ADD OK
```

```
Show<xxxx>
CHNG NEXT
```

- 8 Press AM or 1
or
Press PM or 2.
- 9 Press OK or # to accept the start time.
- 10 Enter the time when Off-premise Message Notification is to stop. This is a four-digit field. You must precede a single-digit hour and minute with a zero.
- 11 Press AM or 1
or
Press PM or 2.
- 12 Press OK or # to accept the stop time.
- 13 Press YES or 1 to set up another destination number.
- 14 Press SETUP to set up another destination number.
- 15 Press PAGER or 3 to select a pager number destination.
- 16 Enter the destination pager number and press OK or #.
- 17 Press OK or # to accept the destination pager number represented by <x>
or
press ADD or 2 to add special characters and use your dialpad or follow the voice prompts to add characters. See [“Adding special characters to a destination number” on page 77](#).
After you add special characters, press OK or #.
- 18 Press NEXT or # to accept the default pager message represented by <xxxx>. The default pager message that CallPilot sends is the CallPilot extension. This is the sequence of digits that is sent after the pager service is dialed, to notify you of who is paging you
or
press CHNG or 1 to change the pager message.
The combined limit is 30 characters for the pager phone number and the pager message.

```
Notify2: pager
CHNG  OTHR  NEXT
```

```
Notify 3: none
SETUP      NEXT
```

```
Start:<start time>
CHNG      NEXT
```

```
Stop:<stop time>
CHNG      NEXT
```

```
Mesg type: new
CHNG      OK
```

```
Mesg notify
ADMIN  SELECT
```

- 19 The display shows that the second destination is a pager. Press **NEXT** or **#** to continue.
- 20 Press **NEXT** or **#** to continue.
- 21 Press **NEXT** or **#** to accept the start time that you entered or press **CHNG** or **1** to change the start time.
- 22 Press **NEXT** or **#** to accept the stop time that you entered or press **CHNG** or **1** to change the stop time.
- 23 Press **OK** or **#** to be notified when you receive a new message or press **CHNG** or **1** to be notified only when you receive an urgent message.
- 24 Press **END** to end the session.

Changing Off-premise Message Notification

You can change the parameters and destinations for Off-Premise Message Notification. Refer to [“Off-premise Message Notification parameters” on page 84](#) for more information about parameters.

If you want to change the time or message type parameters, use the procedure [“To change the time range or type of message parameters” on page 93](#)

If you want to change the destination type see the procedure for the destination type.

| To change the destination type | see |
|---|-------------------------|
| from a phone to an extension, pager or another phone number | page 95 |
| from a pager to an extension or phone | page 97 |
| from a phone or extension to a pager | page 98 |

To change the time range or type of message parameters

- 1 Press **981**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.

2 If you use the CallPilot interface:

- Press **8** **5** to open the Mailbox Tools
- Press **NOTIF** or **2** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN SELECT
```

```
Notify:<>
CHNG NEXT
```

```
More dest?
YES NO
```

```
Start:<start time>
CHNG NEXT
```

```
Stop:<stop time>
CHNG NEXT
```

```
Msg type: new
CHNG OK
```

```
Msg notify
ADMIN SELECT
```

3 Press **ADMIN** or **1** to set up Off-premise Message Notification.

4 Press **NEXT**.

If you want to change the destination type see [“To change the destination type” on page 93](#) for the appropriate procedure.

5 Press **NO** or **#** to continue.

6 Press **CHNG** or **1** to change the start time or press **NEXT** or **#** to accept the start time.

7 Press **CHNG** or **1** to change the stop time or press **NEXT** or **#** to accept the stop time.

8 Press **CHNG** or **1** to change the message type to urgent. Press **OK** or **#** to accept the new default message. You can choose to be notified of all new messages or urgent messages only.

Change the message type to urgent to be notified only when you receive an urgent message.

9 Press **END** to end the session.

To change the destination from phone to another destination

- 1 Press **[*] 9 [8] 1**.
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN  SELECT
```

- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Notify: Phone
CHNG      NEXT
```

- 4 Press **CHNG** or **[1]** to change the destination.

```
Destination:
PHONE  EXT  PAGER
```

- 5 Press **PHONE** or **[1]** to choose another phone number destination
or
press **EXT** or **[2]** to choose an extension destination
or
press **PAGER** or **[3]** to choose a pager number destination.

```
<>
RETRY      OK
```

- 6 Enter the destination number and press **OK** or **[#]**.
The destination phone number cannot be longer than 30 digits.

```
Accept:<xxxx>
RETRY      OK
```

- 7 Press **OK** or **[#]** to accept the destination number
or
press **RETRY** or **[*]** to re-enter the destination number.

```
Notify:<X>
CHNG      NEXT
```

- 8** Press NEXT or **#** to continue
or
press CHNG or **1** to change the destination, and repeat
steps 6 through 8.

NOTE: If you changed the destination to pager, go to step
13.

```
More dest?
YES      NO
```

- 9** Press YES or **1** if you want to set up another destination
number
or
press NO or **#** if you do not want to set up another
destination number.

```
Start:<start time>
CHNG      NEXT
```

- 10** Press CHNG or **1** to change the start time
or
press NEXT or **#** to accept the start time.

```
Stop:<stop time>
CHNG      NEXT
```

- 11** Press CHNG or **1** to change the stop time
or
press NEXT or **#** to accept the stop time.

```
Ms9 type:new
CHNG      OK
```

- 12** If you want to change message notification,
press CHNG or **1** if you want to be notified only when you
receive an urgent message.
Press OK or **#**.

```
Ms9 notify
ADMIN  SELECT
```

- 13** Press **[End Call]** to end the session.

To change the destination from pager to phone or extension

1 Press **[*] 9 [8] 1**.
Follow the voice prompts or the display button options to open your mailbox.

2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

```
Modify:Pager
CHNG NEXT
```

```
Destination:
PHONE EXT PAGER
```

```
<xxx>:
RETRY OK
```

```
Notify:<x>
CHNG NEXT
```

```
More dest?
YES NO
```

3 Press **ADMIN** or **[1]** to change Off-premise Message Notification. The display is a review of the first destination type and destination number.

4 Press **CHNG** or **[1]** to change the destination type and the destination number.

5 Choose the type of destination number:
press **PHONE** or **[1]** to choose a phone number destination or
press **EXT** or **[2]** to choose an extension destination.

6 Enter the destination number you want to set up Off-Premise Message Notification for.
<x> represents the destination number.
Press **OK** or **[#]** to accept the destination number or
press **RETRY** or **[*]** to re-enter the number.

7 Press **NEXT** or **[#]** to continue.

8 Press **YES** or **[1]** if you want to set up another destination, and repeat steps 6 through 8
or
press **NO** or **[#]** if you do not want to set up another destination.

```
Start:<start time>
CHNG          NEXT
```

- 9** Press **CHNG** or **1** to change the start time or press **NEXT** or **#** to accept the start time.

```
Stop:<stop time>
CHNG          NEXT
```

- 10** Press **CHNG** or **1** to change the stop time or press **NEXT** or **#** to accept the stop time.

```
Msg type:new
CHNG          OK
```

- 11** If you want to change message notification, press **CHNG** or **1** if you want to be notified only when you receive an urgent message. Press **OK** or **#**.

```
Msg notify
ADMIN        SELECT
```

- 12** Press **[End Call]** to end the session.

To change the destination from phone or extension to pager

- 1** Press **[Home] 9 8 1**. Follow the voice prompts or the display button options to open your mailbox.
- 2** If you use the CallPilot interface:
 - Press **8 5** to open the Mailbox Tools
 - Press **NOTIF** or **2** to open the Off-premise Message Notification menu
 - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN        SELECT
```

- 3** Press **ADMIN** or **1** to change Off-premise Message Notification. The displays show a review of the first destination type and destination number.

```
Notify:<x>
CHNG          NEXT
```

- 4** Press **CHNG** or **1** to change the destination type and the destination number. <x> represents the type of destination (phone or extension).

```
Destination
PHONE  EXT  PAGER
```

- 5** Press **PAGER** or **3** to choose a pager number destination.

Pager:
RETRY OK

- 6 Enter the pager number and press **OK** or **#** to continue.

<x>
ADD OK

- 7 Press **OK** or **#** to accept the destination pager number represented by <x>
or
press **ADD** or **2** to add special characters and use your dialpad or follow the voice prompts to add characters. See [“Adding special characters to a destination number” on page 77](#).
After you add special characters, press **OK** or **#**.

Show:<xxxx>
CHNG NEXT

- 8 Press **NEXT** or **#** to accept the default pager message represented by <xxxx>. The default pager message that CallPilot sends is the CallPilot extension. This is the sequence of digits that is sent after the pager service is dialed, to notify you of who is paging you
or
press **CHNG** or **1** to change the pager message. The combined limit is 30 characters for the pager phone number and the pager message.

Notify: Pager
CHNG NEXT

- 9 The display shows notification is set up to a pager. Press **NEXT** or **#** to continue.

More dest?
YES NO

- 10 Press **YES** if you want to set up another destination number or
press **NO** if you do not want to set up another destination number.

Ms9 type: new
CHNG OK

- 11 Press **OK** or **#** if you want to be notified when you receive a new message
or
press **CHNG** or **1** if you want to be notified only when you receive an urgent message.

Ms9 notify
ADMIN SELECT

- 12 Press **END** to end the session.

Deleting a destination number

If you have more than one destination number for Off-premise Message Notification, you can delete a destination.

To delete a destination number

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

- 4 Press **OTHR** if you want to delete the first destination or press **NEXT** or **[#]** to view the other destinations until you find the destination that you want to delete. When you find the destination that you want to delete, press **OTHR**.

- 5 Press **DEL** to delete the first destination number.

- 6 The first destination number is deleted. The Notify 2 destination changes to become the Notify 1 destination number.
To delete more destination numbers, press **OTHR** and repeat steps 4 and 5.

- 7 Press **[*]** to end the session.

```
Ms9 notify
ADMIN SELECT
```

```
Notify1: <>
CHNG  OTHR  NEXT
```

```
Notify 1: <>
DEL    INS   QUIT
```

```
Notify1: <>
CHNG  OTHR  NEXT
```

```
Ms9 notify
ADMIN SELECT
```

Adding a destination number

Use this procedure if you have set up Off-premise Message Notification and you want to add another destination number. You can have up to five destination numbers.

To add a destination number

- 1 Press **☛** **9** **8** **1**.

Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **8** **5** to open the Mailbox Tools
- Press **NOTIF** or **2** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **1** to set up Off-premise Message Notification.

```
Notify:☛☛
CHNG          NEXT
```

- 4 Press **NEXT** or **#** to continue.

```
More dest?
YES      NO
```

- 5 Press **YES** or **1** to set up another destination number.

```
Notify2: none
SETUP          NEXT
```

- 6 Press **SETUP** or **1** to set up another destination number and follow the steps in [“To set up Off-premise Message Notification to a phone number” on page 84](#)
or
[“To set up Off-premise Message Notification to an extension” on page 87](#)
or
[“To set up Off-premise Message Notification to a pager” on page 89.](#)

Turning Off-premise Message Notification on or off

You can turn Off-premise Message Notification on or off at any time. If you turn Off-premise Message Notification off, you do not affect any of the assigned parameters.

To turn Off-premise Message Notification on or off

1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options to open your mailbox.

2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

3 Press **SELECT** or **[2]** to set up Off-premise Message Notification.

```
Notify on
CHNG TIME OK
```

4 Press **CHNG** or **[1]** to turn Off-premise Message Notification off if it is on (as shown).

```
Notify off
CHNG TIME OK
```

5 Press **OK** or **[*]**
or
press **TIME** to review the start and stop time parameters.

 



```
Mailbox admin
GREET PSWD QUIT
```

 

 

6 Press **[*]** to end the session.

Chapter 11

Recording a call

About Record A Call

With Record A Call    , you can record an active telephone call and put the resulting message in your mailbox. Before you activate Record A Call, ask the parties on the call for permission to record the call.

The maximum length of the Record A Call message is determined by the Class of Service setting for your incoming message length. If the mailbox message length is reached, you hear the voice prompt “*Recording stopped. The recording limit has been reached*” and the recording ends. After Record A Call stops, you can re-activate     to start another record call session. The call is then recorded in two separate messages. Ask your System Administrator for the message length that is assigned to your mailbox.



Note: Record A Call is not enabled by default. The System Administrator must enable this feature by assigning you a Class of Service that includes Record A Call. In some areas Record A Call is not available as it contravenes local laws. Ask your System Administrator about the availability of Record A Call in your area.

Using Record A Call

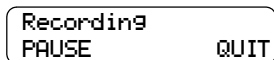
If you use Record A Call, selecting **Announced** or **Silent**, you have the option of storing the recorded call in your personal mailbox, the skillset mailbox, another (specific) mailbox in the system, and/or a network (SFTP) location as a .wav file. The destination of the recorded call is chosen on the **Add Agent** page. When a system administrator defines an SFTP destination folder as a storage location on the network, these storage locations must be on an SCP server. The BCM50 supports OpenSSH 3.7. If the chosen mailboxes are full or do not exist, a window will appear on the telset UI and new recording sessions cannot be started. If a call is to be recorded as a .wav file in a network location for a subscriber (not necessarily an agent), the administrator performs this using Element Manager and CallPilot Manager:

- 1 Enter the network location parameters using Element Manager.
- 2 In CallPilot Manager, update the Class of Service’s **Recorded Call Network (SFTP) destination** (none by default).
Any mailbox belonging to that class will have their own **Record A Call** messages saved on that server, in the specified folder, as well as their mailbox (if the agent is on the call at their telephone set).



Prerequisites

- For contact center agents, **Record A Call** must be configured on the **Add Agent, Change Agent**, or **Add Many Agents** pages of the CallPilot Manager. The system administrator will click **Disabled**, **Announced**, or **Silent** from the **Record-a-call** drop-down list.
- For subscribers, the administrator must configure **Record A Call** in the **Class of Service's Recorded Call Network (SFTP) destination**. When a system administrator defines an SFTP folder as a storage location on the network, these storage locations must be on an SCP server. The BCM50 supports OpenSSH 3.7.

To record a call



Recording
PAUSE QUIT

- 1 While you are on an active call, press . If **Record-a-call** is set to **Announced**, all parties on the call hear the prompt *"This call is being recorded"* and a recording tone.
- 2 Press **QUIT** to end recording
or
press **PAUSE** to suspend recording.
Press **RESUME** to continue recording or press **QUIT** to end recording.
- 3 When you stop recording, all the parties on the call hear the prompt *"Recording stopped."*
Nothing is heard if **Record A Call** is set to **Silent**.
- 4 The display will briefly show "Message Left". Press  to end the call.

Chapter 12

Broadcast and Information messages

About Broadcast messages

You can ask the System Administrator to send a Broadcast message if you need to send a message to every initialized mailbox on your phone system. You can ask the System Administrator to send a Broadcast message to announce meetings, special company events, and reminders. Sending a Broadcast message eliminates recording and sending the same message several times.

Broadcast messages play on all mailboxes initialized with CallPilot.



Note: Broadcast messages are not sent to Information or General Delivery mailboxes.

Information mailbox greetings

Your business or department can use Information mailboxes to provide callers with messages and announcements. You can record and update greetings for an Information mailbox.

You can use Information mailbox greetings to:

- announce sales
- provide product lists
- announce special events

Make it easy for callers to access Information mailbox greetings by mentioning the Information mailbox in the Automated Attendant, or by asking the operator to route enquiries to the Information mailbox. Ask your System Administrator for details.

Callers cannot leave messages in an Information mailbox.

Recording an Information mailbox greeting

Before you record an Information mailbox greeting, you must determine what the greeting includes. Be sure to include important times and dates.

For example: *“Paddy’s Dance Studio proudly presents an extravaganza of dance. The entertainment begins at 8:00 pm on the fourth of July. Toddlers tap is in the White Room. Folk dance is in the Green Room. Classical ballet is in the Pink Room. Contemporary jazz is in the Blue Room. The studio and recital rooms are located at 222 Main Street.”*

Write the greeting down and practice reading it aloud. When you are confident the greeting includes everything you want it to, record the greeting. If you are using a phone system with bilingual capability, you must record the Information mailbox greeting in both languages.

An Information mailbox greeting can be either a Primary or an Alternate mailbox greeting.

To record an Information mailbox greeting

```
Log:
QUIT  RETRY  OK
```

- 1 Press **9** **8** **1**.
Press **QTHR**.
Enter the mailbox number and password, then press **OK** or **#**.

The System Administrator creates the password when they initialize the mailbox. Ask the System Administrator for the Information mailbox password.

```
Primary greeting
REC  PLAY  QUIT
```

- 2 Press **REC** or **1**.

```
Record greeting?
RETRY  PAUSE  OK
```

- 3 At the sound of the tone, record the Information mailbox greeting.
Press **OK** or **#** when you are done.

```
Accept greeting?
RETRY  PLAY  OK
```

- 4 Press **OK** or **#** to accept the recording
or
press **PLAY** or **1** to listen to the greeting
or
press **RETRY** or **2** to rerecord the greeting.

```
Primary greeting
REC  PLAY  QUIT
```

- 5 Press **QUIT** or **#** to end the session.

Chapter 13

CallPilot tips

This chapter contains tips on how to optimize your use of CallPilot.

Listen to your messages frequently. Answer your messages promptly to encourage callers to use CallPilot and reassure them that it is as reliable as speaking with you personally.

You do not have to be at your desk to play your messages. When you are away from your desk, you can play your messages from any tone dial phone.

Clean up your mailbox. There is limited storage in your mailbox and within CallPilot. Do not save messages unless you need to listen to them again. When you are finished with a message, erase it to create storage space.

Keep a record of your password in a secure place. Treat your CallPilot password as a secret code. Write down your password and keep it in a safe place. Do not keep your password near your phone. If you let someone else have temporary access to your mailbox, change your password afterwards. If you forget your password, the System Administrator can reset it to the default password 0000. You can then enter a new password.

When sending messages, make them brief and to the point. More than 75% of the time spent on a normal business phone call consists of making small talk, pleasantries and other socializing. Sending a message rather than making a call can save you time. Try to avoid sounding hurried or rude while restricting your messages to the essentials.

Change your Primary greeting frequently. It is a good idea to change your Primary greeting on a regular basis. Change your greeting to indicate that you listen to your messages and maintain your mailbox on a regular basis. Change your Primary greeting to provide a personal touch that frequent callers appreciate.

Make your Alternate greeting specific. Choosing an Alternate greeting usually means you are away from the office. If you are out of the office, indicate in your Alternate greeting when you expect to return. If you will be checking your mailbox while you are out of the office, include that in your message. If callers can reach you at another phone number, ensure that your message includes the phone number and the time period of the temporary arrangement. If you are going to be out of the office, remember to press Call Forward to forward incoming calls to your mailbox.

Use an Extended Absence Greeting. Begin this greeting by announcing your vacation or travel plans. This gets the attention of the caller. For example, *“Vacation alert! Hi, this is Marshall. I will be on vacation starting on the 5th, and I will be returning to work on the 12th. If you care to do so, please leave a message and I will return your call when I return from vacation. For immediate assistance, please press zero.”*

Record your greetings and messages clearly. For a better quality recording, speak directly into the handset. Do not use the Handsfree feature. Remember to speak clearly in a pleasant voice at a pace that is easy to understand. Do not speak too softly or loudly or make the greeting or message too lengthy. After you record a greeting or message play it back. Make sure that your greeting or message sounds the way you want it to before you accept it.

Do not forget to use the Copy and Reply features. You can use CallPilot to send copies of messages to other mailboxes and reply to messages with a message of your own. When you send copies of messages to other people, ensure that your introduction explains:

- why you are forwarding a copy of the message
- whether the copy is for information only
- whether the message is meant for the person you are forwarding it to
- who is responsible for the action on the message

Use Group Lists for multiple copies of messages. If you find that you regularly send the same message to several people, ask the System Administrator to create a Group List for you. With a Group List, you can send the same message to all the mailboxes in the Group List.

Encourage CallPilot use. Old habits are sometimes hard to break, and some people have difficulty accepting or trying new technologies. Use your Personal mailbox and other CallPilot features, and encourage your co-workers and frequent callers to use them too.

Report problems promptly. If you encounter problems using CallPilot, report the trouble to the System Administrator as soon as possible.

Chapter 14

Troubleshooting

This chapter describes some problems that can occur when you use CallPilot. Some typical problems are listed and what to do if they occur.

The Auto Attendant transfers some callers to the General Delivery Mailbox

CallPilot requires a tone signal and a minimum voice level. If CallPilot does not receive a response, the caller is automatically transferred by the Auto Attendant to the CallPilot operator. If the operator is not available, the call transfers to the General Delivery Mailbox.

Possibly the extension called does not have a mailbox assigned to it. Ask your System Administrator to verify that a mailbox is assigned to the extension.

Feature 981 produces a LOG prompt on my phone display

Possible causes of the Log prompt:

- The extension you are using does not have an operating mailbox. If the extension does not have a mailbox, CallPilot requests both a mailbox number and a password.
- The extension is a Guest mailbox, which usually does not have an assigned extension. Ask your System Administrator to verify that your extension is properly assigned to your mailbox.

I cannot forward my phone to CallPilot

If you try to forward your extension to CallPilot and the display shows **Not in service** you can be forwarding to the wrong extension number. Use to verify you are calling the correct CallPilot extension number.

My mailbox is not accepting messages

Make sure your mailbox is initialized. A mailbox cannot receive messages until it is initialized by the owner. Refer to [“Initializing your mailbox” on page 21](#).

Make sure your mailbox is not full. Refer to [“My mailbox is full” on page 112](#).

If you are using an Alternate greeting, check if you have set up your mailbox to accept messages. Refer to [“Choosing a Primary or Alternate mailbox greeting” on page 40](#).

My name does not play in the Company Directory

Check to ensure that your mailbox is initialized. If it is not initialized, your name does not play in the Company Directory and your mailbox cannot receive any messages. If you have recorded your Company Directory name, ask your System Administrator to ensure that the Company Directory is available.

I forgot my mailbox password

A forgotten password cannot be recovered. Your old password must be reset to the default password of four zeroes (0000). After the System Administrator resets your password, you must open your mailbox and change the default password.

My mailbox is locked

Your mailbox is locked if you attempt to access your mailbox and you hear the recording: *“This mailbox has been locked to prevent unauthorized access. Please contact your administrator for assistance.”*

Your mailbox is assigned a maximum number of incorrect password attempts. CallPilot records the number of incorrect attempts from the last time your mailbox was successfully accessed. If the number is exceeded you are locked out. You cannot open your mailbox until the System Administrator resets the password.

CallPilot Timeout

The Timeout feature allows five seconds for you to choose an option. If CallPilot does not detect a selection, it replays the option list. If an option is still not selected, CallPilot ends the session.

CallPilot has minimum voice level detection. If CallPilot does not detect an audio signal, it requests the caller to speak louder and provides the option to re-record. If no voice level is detected after the prompt, CallPilot ends the session.

Messages are cut off

If people need to leave long messages in your mailbox, you can ask the System Administrator to give you more message recording storage space.

My mailbox is full

You know that your mailbox is full if you attempt to listen to your messages and you hear the message, *“Your mailbox is full. You must erase some messages before you can listen to new messages.”*

Your mailbox is equipped with the Never Full Mailbox feature, which lets external callers leave a message in your mailbox, even if the mailbox is “full”. The message is stored, but you cannot access it until you delete at least one saved message. If you find that you need more message time in your mailbox, ask your System Administrator to give you more storage space.

The wrong prompt language appears on the display of my phone

If the wrong language appears on the display of your phone, notify the System Administrator.

Outbound Transfer does not work

Ensure that you have recorded the correct instructions for callers in your personal greeting. In your greeting, tell callers to press **7** if you use the Norstar Voice Mail interface, or **9** if you use the CallPilot interface, to reach you. Refer to [“About Outbound Transfer” on page 77](#) for information.

Ensure that the destination number you enter is not restricted. For example, if you cannot call long distance numbers from your phone, you cannot set up Outbound Transfer to a long distance number.

Check to see if Outbound Transfer is turned on. Refer to [“Turning Outbound Transfer on or off” on page 81](#) for more information.

Off-premise Message Notification does not work

If Off-premise Message Notification does not work, ask the System Administrator to check the Off-premise Message Notification parameters. Also, ask the System Administrator to check whether you are allowed to have Off-premise Message Notification. Ensure that the destination phone number and time parameters are correct.

Ensure that the destination numbers that you enter are not restricted. For example, if you cannot call long distance numbers from your phone, you cannot set up Off-premise Message Notification to a long distance number.

Check to see if Off-premise Message Notification is turned on. Refer to [“Turning Off-premise Message Notification on or off” on page 102](#) for more information.

I cannot use the Reply feature

If you cannot use the Reply feature to reply to an external or network message, contact your System Administrator. The Reply feature is always available for internal calls.

Glossary

Administration

The tasks involved in maintaining CallPilot mailboxes, greetings and set up configuration.

Alternate greeting

A greeting recorded for a Personal mailbox and played on occasions such as absence, illness, or vacation.

Attendant sign On/Off

The task performed by a company receptionist or Operator that indicates to CallPilot when an Operator is available to answer calls.

ATA 2

A Nortel product that lets you connect an analog device, such as a single line telephone or a fax machine, to your telephone system.

Auto Attendant

The CallPilot answering service that answers incoming calls with a Company greeting, plays a list of CallPilot options to a caller and performs call routing functions in response to a caller's dialpad selections.

Broadcast Message

A message that can be sent only by the System Administrator. This type of message plays in all initialized Subscriber mailboxes.

Business Status

A CallPilot setting that tells CallPilot whether a company is closed or open for business.

Class of Service

A predetermined number designation that specifies the CallPilot options for a mailbox.

Company Directory

A voice list that contains the names of users with initialized mailboxes that are designated to appear in the Company Directory.

Conventions

The way certain information is described. For example, using underlined text to represent second-line display prompt information.

Default

The parameters preset in CallPilot.

Designated Operator

A person who is assigned to answer the CallPilot Operator Request option.

Display

A one line or two line screen on a display telephone that shows CallPilot commands and options.

Display buttons

The three buttons on a two line display telephone. Users press these buttons to select the specified CallPilot option.

Display options

The choices available to a user that appear on a two line display telephone. Options shown on the display can be selected using the display or dialpad buttons

DTMF

Dual-Tone MultiFrequency. The type of audio signals that are generated when you press the buttons on a touch-tone telephone.

Envelope information

A date and time stamp that appears on messages left in a mailbox. If the message is left by another mailbox owner, envelope information includes the names of the sender and other recipients.

Extension

A two-digit to seven-digit number used to reach a designated telephone. An internal telephone is also referred to as an extension.

Feature code

A unique three-digit code used to access CallPilot features and options.

General Delivery Mailbox

One of the two Special mailboxes used to store messages for people who do not have a Subscriber mailbox.

Greetings

There are three types of CallPilot greetings: Company greetings, Personal mailbox greetings and Information greetings. Company greetings are played by the Auto Attendant to incoming callers. Personal mailbox greetings are played to callers who want to leave a message in a selected mailbox. Information mailbox greetings are played to describe goods or services available to callers.

Group Lists

A collection of mailbox numbers assigned to a special group name and number by the System Administrator. If a message is sent to a Group List, each mailbox in the list receives the same message.

Guest mailbox

A mailbox assigned to a user who does not have an extension.

Information mailbox

A mailbox that provides a caller with a message describing goods or services available from your company.

Initializing a mailbox

Preparing a mailbox to receive messages, which includes changing a mailbox default password and recording a Company Directory name.

Leave Message

The feature code used to leave messages in CallPilot mailboxes.

Mailbox

A storage place for voice messages on the CallPilot system.

Mailbox number length

The number of digits allowed in a mailbox number.

Mailbox properties

Mailbox properties are optional parameters in addition to the Class of Service values. The mailbox properties are: Include in Company Directory, Alternate Extensions, Express Messaging Line, Call Screening, Message Waiting Notification and Outdial route.

Message delivery options

Message sending options for a message. A message delivery option can be assigned to a message after it is recorded.

Message delivery options are:

- Normal
- Certified/Acknowledge
- Urgent
- Private
- Timed

Message Waiting Notification

A display prompt that informs a mailbox owner when a message is left in a mailbox. This feature is controlled by the Class of Service for your mailbox.

Never Full mailboxes

Your CallPilot mailbox is equipped with the Never Full mailbox feature, which lets an external caller leave a message in your mailbox, even if the mailbox is “full”. The message is stored, but you cannot access it until you delete at least one saved message.

Off-premise Message Notification

The CallPilot feature that calls destination numbers that you set up, to let you know you have a new or urgent message. This feature is controlled by the Class of Service for your mailbox.

Operator Status

The CallPilot indicator that determines if a company’s receptionist or Designated Operator is available.

Option

A CallPilot choice that is given to a user through voice or display prompts.

Password

A four- to eight-digit number that is entered on the dialpad. A password is used to open mailboxes or perform configuration tasks.

Pause

You use pauses when you set up pager notification. Each pause character that you enter makes the system wait four seconds before sending out the tones for the digits that follow. For voice pagers, enter pauses after the pager number to delay the start of the CallPilot voice prompt that activates the pager. For alphanumeric pagers, enter pauses after the pager number and before the digits that appear on the pager display.

Personal mailboxes

Mailboxes assigned to users as a place to store messages.

Primary greeting

The main greeting played in a Personal mailbox.

Programmable memory buttons

On display telephones, buttons that can store feature codes and numbers.

Recognize dial tone

After accepting an Outbound Transfer or Off-premise Message Notification destination phone number, entering **[4]** adds a D to the digit string. CallPilot uses this to recognize dial tone when an access code is required.

Resetting passwords

A System Administrator task that changes a mailbox password from its current setting back to the CallPilot default setting 0000 (four zeros).

Special mailboxes

The two mailboxes used by the System Administrator and designated CallPilot Operator. The two Special mailboxes are the System Administrator Mailbox and the General Delivery Mailbox.

System Administrator

The person who configures, updates and maintains the CallPilot system.

System Administrator Mailbox

One of the two Special mailboxes. This mailbox is used by the System Administrator for sending Broadcast Messages. This is also the System Administrator's Personal mailbox.

Touch tone phone

A push-button telephone that emits DTMF tones.

Voice prompts

The prerecorded voice instructions that play when you access CallPilot features and options.

Index

A

Alert tone 72
 Alternate greeting 38, 109
 Alternate Language 18
 Analog station module (ASM) 15
 Analog terminal adapter (ATA) 15
 Attendant, Target 27
 Auto Attendant 52, 111
 Auto-Login 24

B

Broadcast message
 about 107
 recording 107

C

Call Forward
 canceling 71
 remote, setting up 71
 setting up 71
 with CLID, setting up 72
 Call Forward on Busy, overrides Caller ID 73
 Call Record 53
 Call Screening 52
 Caller ID 38, 42, 50, 52, 72, 73
 interaction with Call Forward on Busy 73
 CallPilot
 default password 21
 how callers reach 47
 Mailbox commands 35
 Mailbox options 35
 Other mail options 36
 Playing messages 35
 Sending messages 36
 using with rotary dial telephone 47
 using with touch tone telephone 47
 Calls
 interrupting 72
 transferring
 to General Delivery mailbox 47
 to Operator 47
 to receptionist 47
 CCR Information message 76

Certified Acknowledge Message Delivery option 61
 Character limit
 for Off-premise Message Notification
 destination pager number and message 89
 for Off-premise Message Notification destination
 number 90, 92, 99
 for Outbound Transfer
 destination telephone number 77
 Company Directory 18, 111
 recording name in 21
 removing name from 27
 Company Directory name 37, 39
 Copying a message 48
 copyright 2

D

Default password 21
 Deleted messages, retrieving 50, 52
 Deleting messages 48, 51
 Destination number
 character limit 90, 92, 99
 for pagers 89
 when CallPilot is behind PBX or Centrex 89
 Destination pager number, character limit 89
 Destination telephone number, character limit 77
 Display telephone
 entering characters 16
 using 13

E

Erased messages, retrieving 52
 Erasing messages 48, 51

F

Feature 986 76
 Feature 987 72
 Feature codes 31
 Forwarded messages, recording an introduction for 66
 Forwarding a message 51
 Full mailbox 47

G

General Delivery mailbox 47

- purpose 20
- Greetings 22
 - Alternate 38, 109
 - example 38
 - purpose 38
 - personal 22
 - Personalized 38
 - assigning 42
 - available with Caller ID 38
 - deleting 45
 - recording 42
 - Primary 37, 109
 - example 37
 - purpose 37
 - recording
 - Alternate 39
 - Primary 39
 - recording technique 38
- Group List name 65
- Guest mailboxes 19
 - no operating extension for 19

H

- Hold tone 52
- Home menu 76

I

- Information mailbox greeting, recording 107
- Information message, CCR 76
- Initializing your mailbox 21
- Internal messages, replying to 67
- Interrupting a caller 53
- Interrupting calls 72
- Interrupting voice prompts 13, 17

L

- Language, Alternate 18
- Leave Message feature 15
- Listening to your messages. see Playing your mailbox messages

M

- Mail options
 - CallPilot 36
 - Norstar Voice Mail 34
- Mailbox
 - full 47
 - initializing 21
 - setting up 37

- Mailbox greetings, see Greetings
- Mailbox Manager 29
 - interfaces 29
- Mailbox options
 - CallPilot 35
 - Norstar Voice Mail 33
- Mailbox password, changing 25
- Mailboxes
 - General Delivery
 - purpose 20
 - Guest 19
 - Information 19
 - Special 20
 - Subscriber 19
- Making selections using the dialpad, with a one line display telephone 13
- Menu, Home (CCR) 76
- Message Delivery options
 - Certified Acknowledge 61
 - Normal 61
 - Private 61
 - Timed 61
 - Urgent 61
- Messages
 - copying 48
 - cut off 112
 - deleted, retrieving 50
 - deleting 48, 51
 - erasing 48, 51
 - forwarding 51
 - listening to, see Messages, playing
 - minimum recording length 55
 - playing 48
 - pausing 49
 - rewinding 48, 50
 - skipping forward 49, 50
 - skipping to end 48
 - the envelope 48, 51
 - playing the next 49, 51
 - playing the previous 49, 50
 - Private, cannot copy 66
 - quitting 49
 - replaying 49
 - replying to 49, 51
 - saving 49
 - silence timeout 55

N

- Name
 - recording in Company Directory 21

- removing from Company Directory 27
- Never Full mailbox feature 47
- Normal Message Delivery option 61
- Norstar Voice Mail
 - Mailbox commands 33
 - Mailbox options 33
 - Other mail options 34
 - Playing messages 33
 - Sending messages 34

O

- Off-premise Message Notification 83
 - changing parameters 93
 - destination number
 - character limit 90, 92, 99
 - destination pager number and message
 - character limit 89
 - feature restrictions 84
 - not working 113
 - setting up
 - to a pager number 89
 - to a telephone number 84
 - to an extension number 87
 - to wrong destination 83
- Off-premise Message Notification parameters
 - destination telephone number 84
 - destination type 84
 - time range 84
 - types of message 84
- Open Mailbox feature 15
- Opening your mailbox
 - Auto-Login 24
 - from your extension 24
 - remotely 25
- Operator 18
- Optimizing Outbound Transfer 79
- Outbound Transfer
 - activating 81
 - canceling 81
 - destination telephone number
 - character limit 77
 - setting up
 - to a phone number 79
 - to an extension 80

P

- Park and Page 18, 37
- Password 111
 - “locked-out” 112
 - changing 25

- default 21
- Pausing a message 49
- Personal greetings, example 27
- Personalized greeting 38
 - assigning 42
 - deleting 45
 - recording 42
- Playing the message envelope 48, 51
- Playing your mailbox messages 48
- Primary greeting 37, 109
- Private Message Delivery option 61
 - no forwarding with 61
- Private messages
 - cannot copy 66
 - not forwarded 61
- Prompt language, wrong 112

R

- Recording
 - Alternate greeting 39
 - messages 55
 - Personalized greeting 42
 - Primary greeting 39
- Recording a call 53
- Recording technique, Greetings 38
- regulatory information 2
- Replaying messages 49
- Replying
 - to an external message sender 68
 - to an internal message sender 67
 - to messages 49, 51
- Retrieving deleted messages 50
- Rewinding messages 48, 50

S

- Saving messages 49
- Sending messages, CallPilot 36
- Sending messages, Norstar Voice Mail 34
- Setting up
 - Off-premise Message Notification
 - to a pager number 89
 - to a telephone number 84
 - to an extension number 87
 - Outbound Transfer
 - to a phone number 79
 - to an extension 80
 - your mailbox 37

Skipping forward in messages 49, 50
Skipping forward to end of messages 48
Special mailboxes
 General Delivery 20
 System Administrator 20
Subscriber mailbox 19
 Guest 19

T

Target Attendant 27
Timed Message Delivery option 61
Timeout 112
trademarks 2
Transfer 76
Transferring calls
 to General Delivery mailbox 47
 to Operator 47
 to receptionist 47

U

Urgent Message Delivery option 61

V

Voice prompts 15, 61, 72
 interrupting 13, 17
 on a one line display telephone 17